


# 12A Digital Pico SlimLynx<sup>™</sup> Open Frame: Non-Isolated DC-DC Modules

 $3V_{dc} - 14.4V_{dc}$  input;  $0.45V_{dc}$  to  $5.5V_{dc}$  output; 12A Output Current



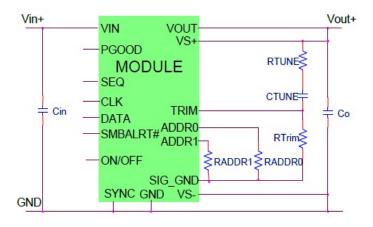

## **Description**

The 12A Digital Pico SlimLynx™ Open Frame power modules are non-isolated dc-dc converters that can deliver up to 12A of output current. These modules operate over a wide range of input voltage ( $V_{IN} = 3V_{dc}$ -14.4V<sub>dc</sub>) and provide a precisely regulated output voltage from 0.45V<sub>dc</sub> to 5.5V<sub>dc</sub>, programmable via an external resistor and PMBus control. Features include a digital interface using the PMBus protocol, remote On/Off, adjustable output voltage, over current and over temperature protection. The PMBus interface supports a range of commands to both control and monitor the module. The module also includes the Tunable Loop™ feature that allows the user to optimize the dynamic response of the converter to match the load with reduced amount of output capacitance leading to savings on cost and PWB area.

## **Applications**

- Distributed power architectures
- Intermediate bus voltage applications
- Telecommunications equipment
- Servers and storage applications
- Networking equipment
- Industrial equipment



#### **Features**

- Compliant to RoHS Directive 2011/65/EU and amended Directive (EU) 2015/863.
- Compliant to REACH Directive (EC) No 1907/2006
- Compliant to IPC-9592 (September 2008), Category 2, Class II
- Ultra low height design for very dense power applications.
- Small size: 12.2 mm x 12.2 mm x 2.9 mm (Max) (0.48 in x 0.48 in x 0.116 in)
- Output voltage programmable from 0.6V<sub>dc</sub> to 5.5V<sub>dc</sub> via external resistor. Digitally adjustable down to 0.45V<sub>dc</sub>
- Wide Input voltage range (3V<sub>dc</sub>-14.4V<sub>dc</sub>)
- Wide operating temperature range [-40°C to 85°
   C]. See derating curves
- DOSA approved footprint
- Digital interface through the PMBus™ # protocol

- Tunable Loop™ to optimize dynamic output voltage response
- Flexible output voltage sequencing EZ-SEQUENCE
- Power Good signal
- Remote On/Off
- Fixed switching frequency with capability of external synchronization
- Output overcurrent protection (non-latching)
- Overtemperature protection
- Ability to sink and source current
- Compatible in a Pb-free or SnPb reflow environment
- ANSI/UL\* 62368-1 and CAN/CSA† C22.2 No. 62368-1 Recognized, DIN VDE‡ 0868-1/A11:2017 (EN62368-1:2014/A11:2017)
- ISO\*\* 9001 and ISO 14001 certified manufacturing facilities

#### **FOOTNOTES**

<sup>\*</sup> UL is a registered trademark of Underwriters Laboratories, Inc.

<sup>&</sup>lt;sup>†</sup> CSA is a registered trademark of Canadian Standards Association.

<sup>&</sup>lt;sup>‡</sup> VDE is a trademark of Verband Deutscher Elektrotechniker e.V.

<sup>\*\*</sup> ISO is a registered trademark of the International Organization of Standards

<sup>\*</sup>The PMBus name and logo are registered trademarks of the System Management Interface Forum (SMIF)

## **Technical Specifications**



## **Absolute Maximum Ratings**

Stresses in excess of the absolute maximum ratings can cause permanent damage to the device. These are absolute stress ratings only, functional operation of the device is not implied at these or any other conditions in excess of those given in the operations sections of the data sheet. Exposure to absolute maximum ratings for extended periods can adversely affect the device reliability.

Parameter	Device	Symbol	Min	Max	Unit
Input Voltage	All	V <sub>IN</sub>	-0.3	15	\/
Continuous	All	VIN	-0.5	15	V
SEQ, SYNC, VS+	All			7	V
CLK, DATA, SMBALERT#	All			3.6	V
Operating Ambient Temperature	All	TA	-40	85	°C
(see Thermal Considerations section)	All	IA	-40	0	C
Storage Temperature	All	T <sub>stg</sub>	-55	125	°C

## **Electrical Specifications**

Unless otherwise indicated, specifications apply overall operating input voltage, resistive load, and temperature conditions.

Parameter	Device	Symbol	Min	Тур	Max	Unit
Operating Input Voltage	All	V <sub>IN</sub>	3	_	14.4	$V_{dc}$
Maximum Input Current	A 11	1			77	^
$(V_{IN} = 3V \text{ to } 14.4V, I_O = I_{O, max})$	All	I <sub>IN,max</sub>			11	Adc
Input No Load Current	$V_{O,set} = 0.6 V_{dc}$	I <sub>IN,No load</sub>		50		mA
$(V_{IN} = 12V_{dc}, I_O = 0, module enabled)$	$V_{O,set} = 5.5V_{dc}$	I <sub>IN,No load</sub>		180		mA
Input Stand-by Current	All			8		mA
(V <sub>IN</sub> = 12V <sub>dc</sub> , module disabled)	All	I <sub>IN,stand-by</sub>		0		MA
Inrush Transient	All	l²t			1	$A^2s$
Input Reflected Ripple Current, peak-to-peak (5Hz to 20MHz, $l_{\mu}H$ source impedance; $V_{l_N}=0$ to $l_{4}V$ , $l_{0}=l_{0,max}$ ; See Test Configurations)	All			30		mA <sub>p-p</sub>
Input Ripple Rejection (120Hz)	All			-55	_	dB
Output Voltage Set-point (with 0.1% tolerance for external resistor used to set output voltage)	All	$V_{O,set}$	-1.0		+1.0	% V <sub>O, set</sub>
Output Voltage (Over all operating input voltage, resistive load, and temperature conditions until end of life)	All	$V_{O,set}$	-3.0	_	+3.0	$\%$ $V_{O,set}$
Adjustment Range (selected by an external resistor) (Some output voltages may not be possible depending on the input voltage – see Feature Descriptions Section)	All	Vo	0.6		5.5	V <sub>dc</sub>
PMBus Adjustable Output Voltage Range	All	$V_{\text{O, adj}}$	-25	0	+25	$\%$ $V_{O, set}$
PMBus Output Voltage Adjustment Step Size	All		0.4			$\%$ $V_{O, set}$
Remote Sense Range	All				0.5	$V_{dc}$
Output Regulation (for $V_0 \ge 2.5V_{dc}$ )						
Line $(V_{IN}=V_{IN}, min to V_{IN}, max)$	All			_	+0.4	$\% V_{O,  set}$
Load (I <sub>O</sub> =I <sub>O, min</sub> to I <sub>O, max</sub> )	All			_	10	mV
Output Regulation (for $V_0 < 2.5V_{dc}$ )						
Line (V <sub>IN</sub> =V <sub>IN, min</sub> to V <sub>IN, max</sub> )	All			_	5	mV
Load (I <sub>O</sub> =I <sub>O, min</sub> to I <sub>O, max</sub> )	All			_	10	mV
Temperature ( $T_{ref}=T_{A, min}$ to $T_{A, max}$ )	All			_	0.4	% V <sub>O, set</sub>



## **Electrical Specifications** (continued)

Parameter	Device	Symbol	Min	Тур	Max	Unit
Input Noise on nominal input at 25°C						
$(V_{IN}=V_{IN, nom} \text{ and } I_0=I_{0 \text{ max.}} C_{in}=1x47nF(0402) \text{ or}$						
equivalent, $2x22\mu F(1210)$ ceramic capacitors or equivalent and Peak-to-Peak (Full Bandwidth) for all $V_{\odot}$	All		_	360		mΛ
Output Ripple and Noise on nominal output at 25°C	All			360		mA <sub>pk-pk</sub>
$(V_{IN}=V_{IN, nom} \text{ and } I_O=I_{O,max} C_o=2x47nF(0402) \text{ or equivalent,}$						
2x47µF (1210) or equivalent ceramic capacitors on						
output and 1x47nF(0402) or equivalent, 2x22µF(1210)						
ceramic capacitors or equivalent and 470µF,16V electrolytic) on input. (See Note 2 below)						
				30 <b>2</b>		ma\ /
Peak-to-Peak (Full bandwidth) V₀≤1.2V₀ Peak-to-Peak (Full bandwidth) V₀>1.2V₀	All			3%V <sub>2</sub>		$mV_{pk-pk}$
, ,						mV <sub>pk-pk</sub>
RMS (Full bandwidth) for all V <sub>o</sub>	All			2%V <sub>o</sub> <sup>2</sup>		mV <sub>rms</sub>
External Capacitance <sup>1</sup>						
Without the Tunable Loop™						
ESR ≥ 1 mΩ	All	C <sub>O, max</sub>	1 X 47µF		200µF	μF
With the Tunable Loop $^{TM}$			'			
ESR ≥ 0.15 mΩ	All	C <sub>O, max</sub>	200		1000	μF
ESR ≥ 10 mΩ	All	C <sub>O, max</sub>			5000	μF
Output Current (in either sink or source mode)	All	l <sub>o</sub>	0		12	Adc
Output Current Limit Inception (Hiccup Mode)	All	I <sub>O. lim</sub>		130		% I <sub>o,max</sub>
(current limit does not operate in sink mode)		-0,				· · · · · · · · · · · · · · · · · · ·
Output Short-Circuit Current	All	I <sub>O</sub> , s/c		1.3		$A_{rms}$
(V <sub>o</sub> ≤250mV) ( Hiccup Mode )						
Efficiency	$V_{O,set} = 0.6V_{dc}$	η		70.8		%
$V_{IN}$ = 12 $V_{dc}$ , $T_A$ =25°C	$V_{O,set} = 1.2V_{dc}$	η		81.5		%
$I_O=I_{O, max}$ , $V_O=V_{O, set}$	$V_{O,set} = 1.8V_{dc}$	η		85.7		%
	$V_{O,set} = 2.5V_{dc}$	η		88.3		%
	$V_{O,set} = 3.3V_{dc}$	η		90.1		%
	$V_{O,set} = 5.0 V_{dc}$	η		92.5		%
Switching Frequency	All	$f_{sw}$	_	800		kHz
Frequency Synchronization	All					
Synchronization Frequency Range	All		760	800	840	kHz
High-Level Input Voltage	All	V <sub>IH</sub>	2			V
Low-Level Input Voltage	All	V <sub>IL</sub>			0.4	V
Input Current, SYNC	All	I <sub>SYNC</sub>			100	nA
Minimum Pulse Width, SYNC	All	t <sub>sync</sub>	100			ns
Maximum SYNC rise time	All	t <sub>sync_sh</sub>	100			ns

<sup>&</sup>lt;sup>1</sup> External capacitors may require using the new Tunable Loop<sup>™</sup> feature to ensure that the module is stable as well as getting the best transient response. See the Tunable Loop<sup>™</sup> section for details.

## **General Specifications**

Parameter	Device	Min	Тур	Max	Unit
Calculated MTBF (Io=0.8Io, max, TA=40°C) Telcordia Issue 3 Method 1 Case 3	All		29,951,054		Hours
Weight		_	0.90 (0.032)	_	g (oz.)

<sup>&</sup>lt;sup>2</sup> Exception noted in the ERRATA near the end of this datasheet..



## **Feature Specifications**

Unless otherwise indicated, specifications apply overall operating input voltage, resistive load, and temperature conditions. See Feature Descriptions for additional information.

Parameter	Device	Symbol	Min	Тур	Max	Unit
On/Off Signal Interface						
(V <sub>IN</sub> =VI <sub>N</sub> , <sub>min</sub> to V <sub>IN, max</sub> ; open collector or						
equivalent,						
Signal referenced to GND)						
Device Code with no suffix – Negative Logic (See						
Ordering Information)						
(On/OFF pin is open collector/drain logic input with						
external pull-up resistor; signal referenced to GND)						
Logic High (Module OFF)						
Input High Current	All	I <sub>IH</sub>		_	1	mA
Input High Voltage	All	V <sub>IH</sub>	2	_	$V_{\text{IN, max}}$	$V_{dc}$
Logic Low (Module ON)						
Input low Current	All	I <sub>IL</sub>	_	_	50	μΑ
Input Low Voltage	All	$V_{IL}$	-0.2		0.6	$V_{dc}$
Turn-On Delay and Rise Times						
$(V_{IN}=V_{IN, nom}, I_O=I_{O, max}, V_O \text{ to within } \pm 1\% \text{ of steady state})$						
Case 1: On/Off input is enabled and then input						
power is applied (delay from instant at which	All	T <sub>delay</sub>	_	0.9	_	msec
$V_{IN} = V_{IN, min}$ until $V_o = 10\%$ of $V_{o, set}$ )		aciay				
Case 2: Input power is applied for at least one						
second and then the On/Off input is enabled		_				
(delay from instant at which Von/Off is enabled	All	T <sub>delay</sub>		0.8		msec
until $V_o = 10\%$ of $V_{o, set}$ )						
Output voltage Rise time (time for V <sub>o</sub> to rise						
from 10% of V <sub>o</sub> , set to 90% of V <sub>o</sub> , set)	All	T <sub>rise</sub>		2	_	msec
Output voltage overshoot						
$(T_A = 25^{\circ}C V_{IN} = V_{IN, min} \text{ to } V_{IN, max}, I_O = I_O, min \text{ to } I_{O, max})$					3	% V <sub>O. set</sub>
With or without maximum external capacitance						70 V O, set
Over Temperature Protection	All	$T_{ref}$		130		°C
(See Thermal Considerations section)	A II	 		120		0.0
PMBus Over Temperature Warning Threshold*	All	T <sub>WARN</sub>		120		°C
Tracking Accuracy (Power-Up: 2V/ms)	All	V <sub>SEQ</sub> -V <sub>o</sub>		100		mV
(Power-Down: 2V/ms)	All	$V_{SEQ}$ $-V_{o}$		100		mV
$(V_{IN, min} \text{ to } V_{IN, max}; I_{O, min} \text{ to } I_{O, max} V_{SEQ} < V_o)$						
Input Undervoltage LOCKOUT	A 11			_		\
Turn-on Threshold	All			3		$V_{dc}$
Turn-off Threshold	All			2.75		$V_{dc}$
Hysteresis	All			0.25		$V_{dc}$
PMBus Adjustable Input Under Voltage Lockout	All		2.5		14	$V_{dc}$
Thresholds						45
Resolution of Adjustable Input Under Voltage	All				500	mv
Threshold						
PGOOD (Power Good)						
Signal Interface Open Drain, V <sub>supply</sub> ≤ 5V <sub>DC</sub>				100		0/1/
Overvoltage threshold for PGOOD ON	All			108		$%V_{O, set}$
Overvoltage threshold for PGOOD OFF	All			110		$%V_{O, set}$
Undervoltage threshold for PGOOD ON	All			92		$\%V_{O, set}$
Undervoltage threshold for PGOOD OFF	All			90		$\%V_{O, set}$
Pulldown resistance of PGOOD pin	All				50	Ω
Sink current capability into PGOOD pin	All				5	mA

<sup>\*</sup>Over temperature Warning – Warning may not activate before alarm and unit may shutdown before warning



## **Digital Interface Specifications**

Unless otherwise indicated, specifications apply over all operating input voltage, resistive load, and temperature conditions. See Feature Descriptions for additional information.

Parameter	Conditions	Symbol	Min	Тур	Max	Unit
PMBus Signal Interface Characteristics						
Input High Voltage (CLK, DATA)		$V_{IH}$	2.1		3.6	V
Input Low Voltage (CLK, DATA)		V <sub>IL</sub>			0.8	V
Input high level current (CLK, DATA)		I <sub>IH</sub>	-10		10	μA
Input low level current (CLK, DATA)		I <sub>IL</sub>	-10		10	μA
Output Low Voltage (CLK, DATA, SMBALERT#)	I <sub>out</sub> =2mA	V <sub>OL</sub>			0.4	V
Output high level open drain leakage current (DATA,SMBALERT#)	V <sub>OUT</sub> =3.6V	Гон	0		10	μΑ
Pin capacitance		Co		0.7		рF
PMBus Operating frequency range	Slave Mode	F <sub>PMB</sub>	10		400	kHz
Data hold time	Receive Mode	+	0			nc
Data noid time	Transmit Mode	t <sub>hd:dat</sub>	300			ns
Data setup time		t <sub>su:DAT</sub>	250			ns
Measurement System Characteristics						
Read delay time		$t_{ extsf{DLY}}$	153	192	231	μs
Output current measurement range		I <sub>RNG</sub>	0		18	Α
Output current measurement resolution		I <sub>RES</sub>	62.5			mA
Output current measurement gain accuracy at 25° C(with $I_{OUT,CORR}$ )		I <sub>ACC</sub>		±5		%
Output current measurement offset		I <sub>OFST</sub>		0.1		Α
V <sub>OUT</sub> measurement range		$V_{OUT(rng)}$	0		5.5	V
V <sub>OUT</sub> measurement resolution		V <sub>OUT(res)</sub>		15.625		mV
V <sub>OUT</sub> measurement accuracy		V <sub>OUT(ACC)</sub>	-15		15	%
V <sub>OUT</sub> measurement offset		V <sub>OUT(ofst)</sub>	-3		3	%
V <sub>IN</sub> measurement range		V <sub>IN(rng)</sub>	3		14.4	V
V <sub>IN</sub> measurement resolution		V <sub>IN(res)</sub>		32.5		mV
V <sub>IN</sub> measurement accuracy		V <sub>IN(ACC)</sub>	-15		15	%



### **Characteristic Curves**

The following figures provide typical characteristics for the 12A Digital Pico SlimLynx™ at 0.6V₀ and 25°C.

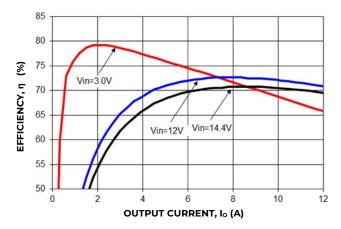


Figure 1. Converter Efficiency verses output current

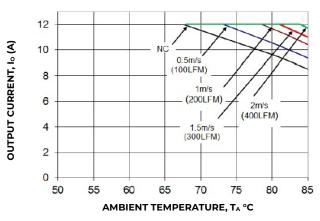


Figure 2. Derating Output Current verses Ambient Temperature and Airflow.

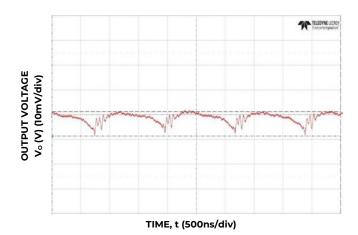


Figure 3. Typical output ripple ( $C_0$ =2x47 $\mu$ F ceramic,  $V_{IN}$  = 12V,  $I_0$  =  $I_{o,max}$ , 20MHz BW).

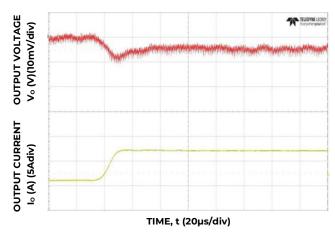


Figure 4. Transient Response to Dynamic Load Change from 50% to 100% at  $12V_{in}$ ,  $C_{out}$ =4x47 $\mu$ F+6x330 $\mu$ F,  $C_{Tune}$ =47nF,  $R_{Tune}$ =300

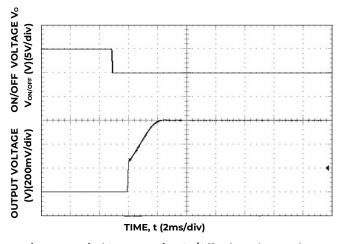


Figure 5. Typical Start-up Using On/Off Voltage ( $I_o$  =  $I_{o,max}$ ).

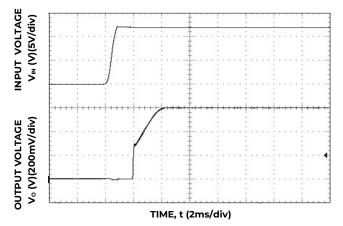


Figure 6. Typical Start-up Using Input Voltage ( $V_{IN} = 12V$ ,  $I_o = I_{o,max}$ ).

PNDT012\_DS



## **Characteristic Curves** (continued)

The following figures provide typical characteristics for the 12A Digital Pico SlimLynx™ at 1.2V₀ and 25°C.

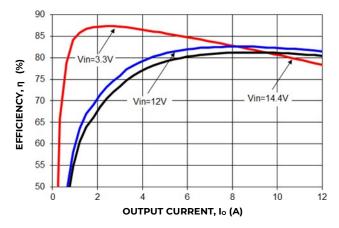


Figure 7. Converter Efficiency verses output current

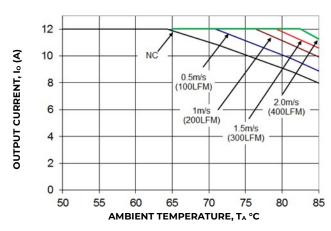


Figure 8. Derating Output Current verses Ambient Temperature and Airflow.

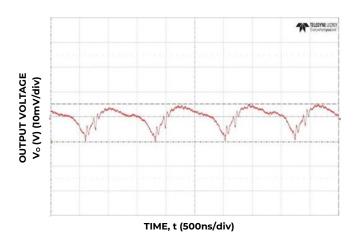


Figure 9. Typical output ripple ( $C_0$ =2x47 $\mu$ F ceramic,  $V_{IN}$  = 12V,  $I_0$  =  $I_{o,max}$ , 20MHz BW).

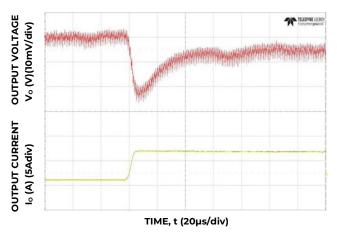


Figure 10. Transient Response to Dynamic Load Change from 50% to 100% at 12 $V_{in}$ ,  $C_{out}$ =4x47 $\mu$ F+3x330 $\mu$ F,  $C_{tune}$ =10nF,  $R_{tune}$ =300

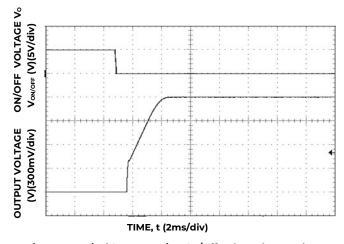


Figure 11. Typical Start-up Using On/Off Voltage (I $_{o}$  = I $_{o,max}$ ).

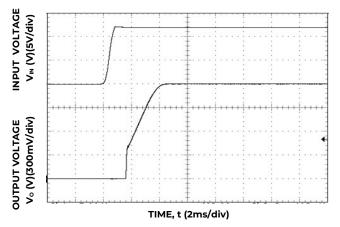


Figure 12 Typical Start-up Using Input Voltage ( $V_{IN}$  = 12V,  $I_o$  =  $I_{o,max}$ ).



## **Characteristic Curves** (continued)

The following figures provide typical characteristics for the 12A Digital Pico SlimLynx™ at 1.8V₀ and 25°C.

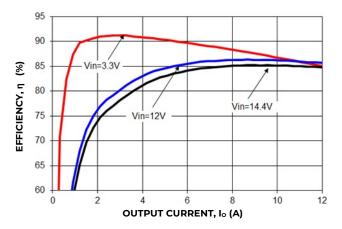


Figure 13. Converter Efficiency verses output current

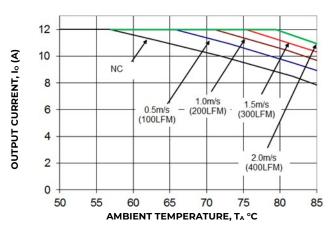


Figure 14. Derating Output Current verses Ambient Temperature and Airflow.

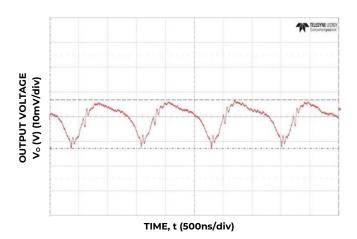


Figure 15. Typical output ripple ( $C_0$ =2x47 $\mu$ F ceramic,  $V_{IN}$  = 12V,  $I_0$  =  $I_{0,max}$ , 20MHz BW).

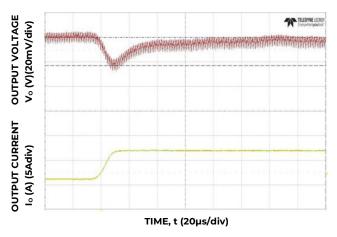


Figure 16. Transient Response to Dynamic Load Change from 50% to 100% at  $12V_{in}$ ,  $C_{out}$ =4x47 $\mu$ F+2x330 $\mu$ F,  $C_{Tune}$ =8.2nF,  $R_{Tune}$ =300

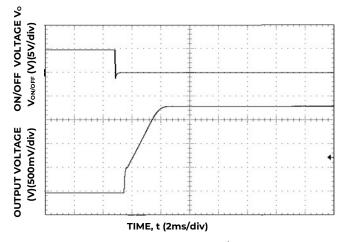


Figure 17. Typical Start-up Using On/Off Voltage ( $I_o = I_{o,max}$ ).

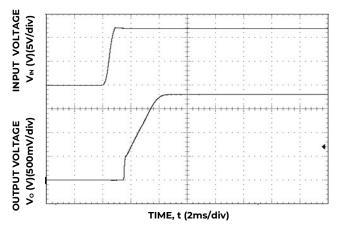


Figure 18. Typical Start-up Using Input Voltage  $(V_{IN} = 12V, I_o = I_{o,max})$ .



## **Characteristic Curves** (continued)

The following figures provide typical characteristics for the 12A Digital Pico SlimLynx™ at 2.5V₀ and 25°C.

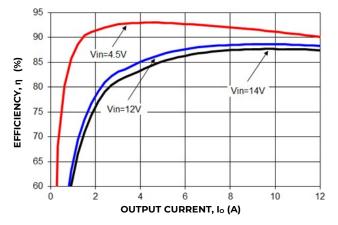


Figure 19. Converter Efficiency verses output current

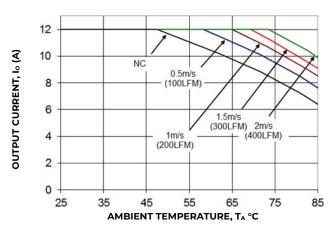


Figure 20. Derating Output Current verses Ambient Temperature and Airflow.

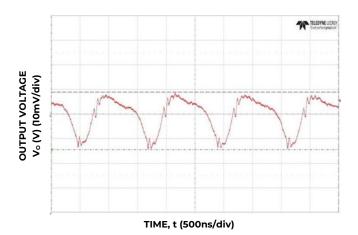


Figure 21. Typical output ripple ( $C_0$ =2x47 $\mu$ F ceramic,  $V_{IN}$  = 12V,  $I_0$  =  $I_{o,max}$ , 20MHz BW).

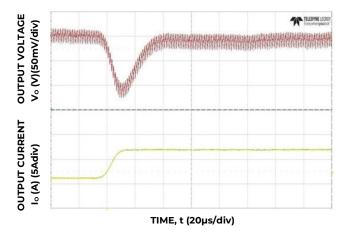


Figure 22. Transient Response to Dynamic Load Change from 50% to 100% at  $12V_{in}$ ,  $C_{out}$ = $4x47\mu$ F+ $1x330\mu$ F,  $C_{Tune}$ =2700p,  $R_{Tune}$ =300

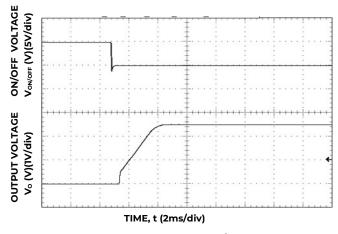


Figure 23. Typical Start-up Using On/Off Voltage ( $I_o = I_{o,max}$ ).

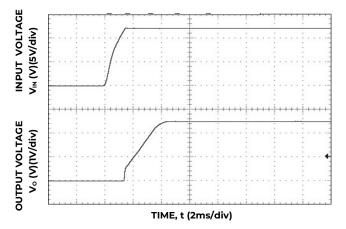


Figure 24. Typical Start-up Using Input Voltage  $(V_{\text{IN}}=12V,\,I_o=I_{o,\text{max}}).$ 

PNDT012\_DS



## **Characteristic Curves** (continued)

The following figures provide typical characteristics for the 12A Digital Pico SlimLynx™ at 3.3V₀ and 25°C.

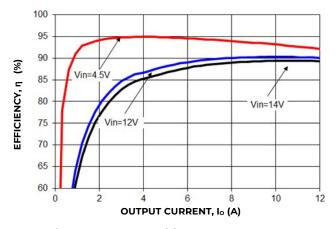


Figure 25. Converter Efficiency verses output current

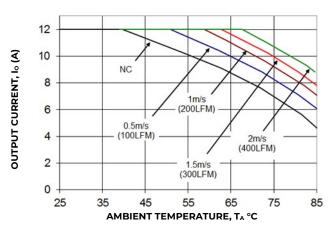


Figure 26. Derating Output Current verses Ambient Temperature and Airflow.

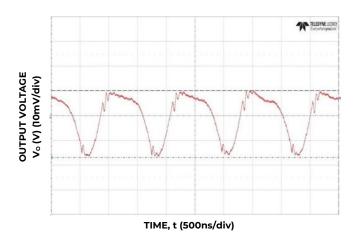


Figure 27. Typical output ripple ( $C_0$ =2x47 $\mu$ F ceramic,  $V_{IN}$  = 12V,  $I_0$  =  $I_{0,max}$ , 20MHz BW).

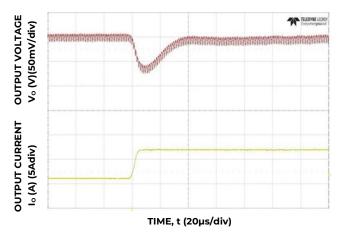


Figure 28. Transient Response to Dynamic Load Change from 50% to 100% at 12 $V_{in}$ ,  $C_{out}$ =3x47 $\mu$ F+1x330 $\mu$ F,  $C_{Tune}$ =1800pF,  $R_{Tune}$ =300

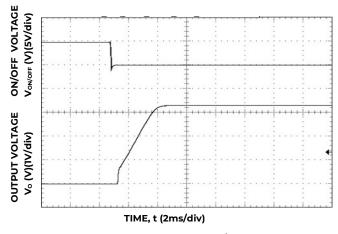


Figure 29. Typical Start-up Using On/Off Voltage ( $I_0 = I_{0,max}$ ).

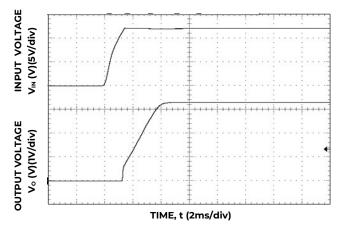


Figure 30. Typical Start-up Using Input Voltage  $(V_{\text{IN}}=12V,\,I_o=I_{o,\text{max}}).$ 



## **Characteristic Curves** (continued)

The following figures provide typical characteristics for the 12A Digital Pico SlimLynx™ at 5V₀ and 25°C.

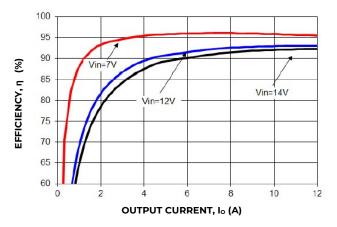


Figure 31. Converter Efficiency verses output current

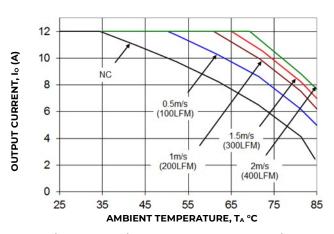


Figure 32. Derating Output Current verses Ambient Temperature and Airflow.

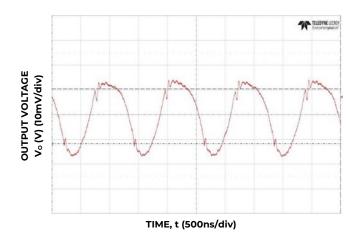


Figure 33. Typical output ripple ( $C_0$ =2x47 $\mu$ F ceramic,  $V_{IN}$  = 12V,  $I_0$  =  $I_{o,max}$ , 20MHz BW).

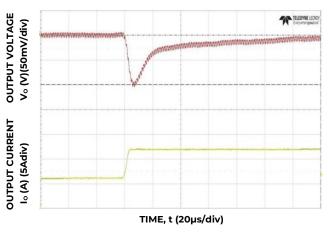


Figure 34. Transient Response to Dynamic Load Change from 50% to 100% at 12V<sub>in</sub>, C<sub>out</sub>=6x47μF, C<sub>Tune</sub>=1200pF, R<sub>Tune</sub>=300

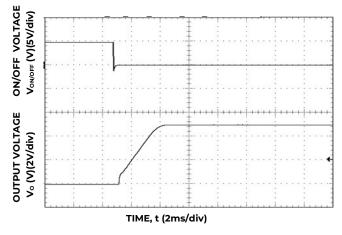


Figure 35. Typical Start-up Using On/Off Voltage ( $I_o = I_{o,max}$ ).

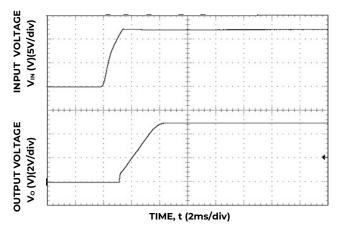


Figure 36. Typical Start-up Using Input Voltage  $(V_{IN} = 12V, I_o = I_{o,max})$ .

Rev. 8.5



#### **Design Considerations**

#### Input Filtering

The 12A Digital Pico SlimLynx<sup>™</sup> Open Frame module should be connected to a low ac-impedance source. A highly inductive source can affect the stability of the module. An input capacitance must be placed directly adjacent to the input pin of the module, to minimize input ripple voltage and ensure module stability.

To minimize input voltage ripple, ceramic capacitors are recommended at the input of the module. Figure 37 shows the input ripple voltage for various output voltages at 12A of load current with 1x22  $\mu$ F or 2x22  $\mu$ F ceramic capacitors and an input of 12V.

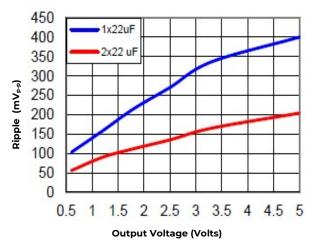


Figure 37. Input ripple voltage for various output voltages with 1x22  $\mu F$  or 2x22  $\mu F$  ceramic capacitors at the input (12A load). Input voltage is 12V. 20MHz BW

#### **Output Filtering**

These modules are designed for low output ripple These modules are designed for low output ripple voltage and will meet the maximum output ripple specification with  $3\times0.047~\mu\text{F}$  ceramic and  $2\times47~\mu\text{F}$  ceramic capacitors at the output of the module. However, additional output filtering may be required by the system designer for a number of reasons. First, there may be a need to further reduce the output ripple and noise of the module. Second, the dynamic response characteristics may need to be customized to a particular load step change.

To reduce the output ripple and improve the dynamic response to a step load change, additional capacitance at the output can be used. Low ESR polymer and ceramic capacitors are recommended to improve the dynamic response of the module. Figure 38 provides output ripple information, measured with

a scope with its Bandwidth limited to 20MHz for different external capacitance values at various Vo and a full load current of 12A. For stable operation of the module, limit the capacitance to less than the maximum output capacitance as specified in the electrical specification table. Optimal performance of the module can be achieved by using the Tunable Loop<sup>TM</sup> feature described later in this data sheet.

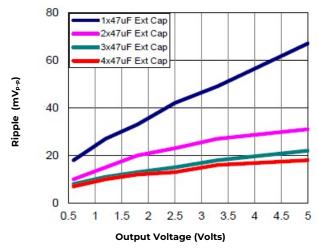


Figure 38. Output ripple voltage for various output voltages with external 2x47  $\mu$ F, 4x47  $\mu$ F, 6x47  $\mu$ F or 8x47  $\mu$ F ceramic capacitors at the full output (12A load). Input voltage is 12V.

#### **Safety Considerations**

For safety agency approval the power module must be installed in compliance with the spacing and separation requirements of the end-use safety agency standards, i.e., UL ANSI/UL\* 62368-1 and CAN/CSA+ C22.2 No. 62368-1 Recognized, DIN VDE 0868-1/A11:2017 (EN62368-1:2014/A11:2017)

For the converter output to be considered meeting the Requirements of safety extra-low voltage (SELV) or ES1, the input must meet SELV/ES1 requirements. The power module has extra-low voltage (ELV) outputs when all inputs are ELV.

The input to these units is to be provided with a fast-acting fuse (e.g. ABC Bussmann) with a maximum rating of 20 A in the positive input lead.

## Omnich

### **Analog Feature Descriptions**

#### Remote On/Off

The module can be turned ON and OFF either by using the ON/OFF pin (Analog interface) or through the PMBus interface (Digital). The module can be configured in a number of ways through the PMBus interface to react to the two ON/OFF inputs:

- Module ON/OFF can be controlled only through the analog interface (digital interface ON/OFF commands are ignored)
- Module ON/OFF can be controlled only through the PMBus interface (analog interface is ignored)
- Module ON/OFF can be controlled by either the analog or digital interface

The default state of the module (as shipped from the factory) is to be controlled by the analog interface only. If the digital interface is to be enabled, or the module is to be controlled only through the digital interface, this change must be made through the PMBus. These changes can be made and written to non-volatile memory on the module so that it is remembered for subsequent use.

#### Analog On/Off

The 12A Digital Pico SlimLynx™ Open Frame power modules feature an On/Off pin for remote On/Off operation. In the Negative Logic On/Off option, (no device code suffix, see Ordering Information), the module turns OFF during logic High and ON during logic Low. The On/Off signal should be always referenced to ground. Leaving the On/Off pin disconnected will turn the module ON when input voltage is present.

In negative logic On/Off modules, the circuit configuration is shown in Fig. 39. The On/Off pin should be pulled high with an external pull-up resistor. When transistor Q1 is in the OFF state, the On/Off pin is pulled high, transistor Q2 is turned ON. This pulls the internal ENABLE low and the module is OFF. To turn the module ON, Q1 is turned ON pulling the On/Off pin low, turning transistor Q2 OFF, which results in the PWM Enable pin going high.

#### Digital On/Off

Please see the Digital Feature Descriptions section

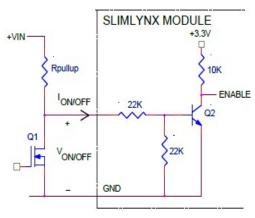


Figure 39. Circuit configuration for using negative On/Off logic.

#### Monotonic Start-up and Shutdown

The module has monotonic start-up and shutdown behavior for any combination of rated input voltage, output current and operating temperature range.

#### Startup into Pre-biased Output

The module can start into a prebiased output as long as the prebias voltage is 0.5V less than the set output voltage.

#### **Analog Output Voltage Programming**

The output voltage of the module is programmable to any voltage from  $0.6_{dc}$  to  $5.5V_{dc}$  by connecting a resistor between the Trim and SIG\_GND pins of the module. Certain restrictions apply on the output voltage set point depending on the input voltage. These are shown in the Output Voltage vs. Input Voltage Set Point Area plot in Fig. 40. The Upper Limit curve shows that for output voltages lower than 1V, the input voltage must be lower than the maximum of 14.4V. The Lower Limit curve shows that for output voltages higher than 0.6V, the input voltage needs to be larger than the minimum of 3V.

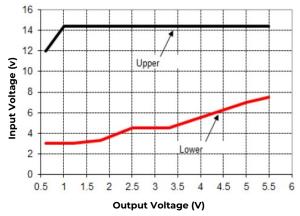


Figure 40. Output Voltage vs. Input Voltage Set Point Area plot showing limits where the output voltage can be set for different input voltages.

#### Analog Output Voltage Programming (continued)

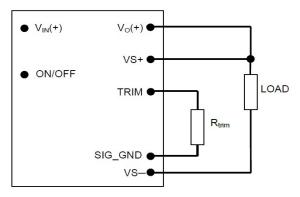


Figure 41. Circuit configuration for programming output voltage using an external resistor.

**Caution** – Do not connect SIG\_GND to GND elsewhere in the layout

Without an external resistor between Trim and SIG\_GND pins, the output of the module will be  $0.6V_{dc}$ . To calculate the value of the trim resistor,  $R_{trim}$  for a desired output voltage, should be as per the following equation:

$$R_{trim} = \begin{bmatrix} 12 \\ \hline (V_o - 0.6) \end{bmatrix} K\Omega$$

 $R_{trim}$  is the external resistor in  $k\Omega$ 

Vo is the desired output voltage.

Table 1 provides  $R_{\text{trim}}$  values required for some common output voltages.

V <sub>O</sub> , set (V)	$R_{trim}$ (K $\Omega$ )
0.6	Open
0.9	40
1.0	30
1.2	20
1.5	13.33
1.8	10
2.5	6.316
3.3	4.444
5.0	2.727

Table 1

#### Digital Output Voltage Adjustment

Please see the Digital Feature Descriptions section.

#### Remote Sense

The power module has a Remote Sense feature to minimize the effects of distribution losses by regulating the voltage between the sense pins (VS+ and VS-). The voltage drop between the sense pins



and the  $V_{\text{OUT}}$  and GND pins of the module should not exceed 0.5V.

#### **Analog Voltage Margining**

Output voltage margining can be implemented in the module by connecting a resistor, R<sub>margin-up</sub>, from the Trim pin to the ground pin for margining-up the output voltage and by connecting a resistor, R<sub>margin-down</sub>, from the Trim pin to output pin for margining-down. Figure 42 shows the circuit configuration for output voltage margining. The POL Programming Tool, available at **omnionpower.com** under the Downloads section, also calculates the values of R<sub>margin-up</sub> and R<sub>margin-down</sub> for a specific output voltage and % margin. Please consult your local OmniOn Critical Power technical representative for additional details.

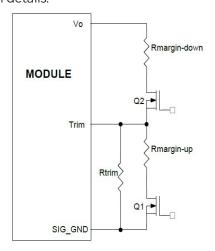


Figure 42. Circuit Configuration for margining Output voltage.

#### Digital Output Voltage Adjustment

Please see the Digital Feature Descriptions section.

#### **Output Voltage Sequencing**

The power module includes a sequencing feature, EZ-SEQUENCE that enables users to implement various types of output voltage sequencing in their applications. This is accomplished via an additional sequencing pin. When not using the sequencing feature, leave it unconnected.

The voltage applied to the SEQ pin should be scaled down by the same ratio as used to scale the output voltage down to the reference voltage of the module. This is accomplished by an external resistive divider connected across the sequencing voltage before it is fed to the SEQ pin as shown in Fig. 43. In addition, a



#### **Output Voltage Sequencing (continued)**

small capacitor (suggested value 100pF) should be connected across the lower resistor R1.

For all SlimLynx modules, the minimum recommended delay between the ON/OFF signal and the sequencing signal is 10ms to ensure that the module output is ramped up according to the sequencing signal. This ensures that the module soft-start routine is completed before the sequencing signal is allowed to ramp up.

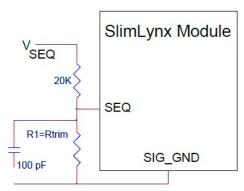


Figure 43. Circuit showing connection of the sequencing signal to the SEQ pin

When the scaled down sequencing voltage is applied to the SEQ pin, the output voltage tracks this voltage until the output reaches the set-point voltage. The final value of the sequencing voltage must be set higher than the set-point voltage of the module. The output voltage follows the sequencing voltage on a one-to-one basis. By connecting multiple modules together, multiple modules can track their output voltages to the voltage applied on the SEQ pin.

The module's output can track the SEQ pin signal with slopes of up to 0.5V/msec during power-up or power-down.

To initiate simultaneous shutdown of the modules, the SEQ pin voltage is lowered in a controlled manner. The output voltage of the modules tracks the voltages below their set- point voltages on a one-to-one basis. A valid input voltage must be maintained until the tracking and output voltages reach ground potential.

Note that in all digital SlimLynx series of modules, the PMBus Output Undervoltage Fault will be tripped when sequencing is employed. This will be detected using the STATUS\_WORD and STATUS\_VOUT PMBus commands. In addition, the SMBALERT# signal will be asserted low as occurs for all faults and warnings. To

avoid the module shutting down due to the Output Undervoltage Fault, the module must be set to continue operation without interruption as the response to this fault (see the description of the PMBus command VOUT\_UV\_FAULT\_RESPONSE for additional information).

#### **Overcurrent Protection**

To provide protection in a fault (output overload) condition, the unit is equipped with internal current-limiting circuitry and can endure current limiting continuously. At the point of current-limit inception, the unit enters hiccup mode. The unit operates normally once the output current is brought back into its specified range.

#### Digital Adjustable overcurrent Warning

Please see the Digital Feature Descriptions section.

#### **Overtemperature Protection**

To provide protection in a fault condition, the unit is equipped with a thermal shutdown circuit. The unit will shut down if the overtemperature threshold of  $150^{\circ}\text{C}(\text{typ})$  is exceeded at the thermal reference point  $T_{\text{ref}}$ . Once the unit goes into thermal shutdown it will then wait to cool before attempting to restart.

## Digital Temperature Status via PMBus

Please see the Digital Feature Descriptions section.

## Digitally Adjustable Output Over and Under Voltage Protection

Please see the Digital Feature Descriptions section.

#### Input Undervoltage Lockout

At input voltages below the input undervoltage lockout limit, the module operation is disabled. The module will begin to operate at an input voltage above the undervoltage lockout turn-on threshold.

#### Digitally Adjustable Input Undervoltage Lockout

Please see the Digital Feature Descriptions section.

#### **Digitally Adjustable Power Good Thresholds**

Please see the Digital Feature Descriptions section.

### Synchronization

The module switching frequency can be synchronized to a signal with an external frequency within a specified range.

## Omnich

#### Synchronization (continued)

Synchronization can be done by using the external signal applied to the SYNC pin of the module as shown in Fig. 44, with the converter being synchronized by the rising edge of the external signal. The Electrical Specifications table specifies the requirements of the external SYNC signal. If the SYNC pin is not used, the module should free run at the default switching frequency. If synchronization is not being used, connect the SYNC pin to GND.

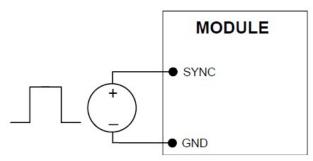


Figure 44. External source connections to synchronize switching frequency of the module.

## Measuring Output Current, Output Voltage and Input Voltage

Please see the Digital Feature Descriptions section.

#### Tunable Loop™

The module has a feature that optimizes transient response of the module called Tunable Loop<sup>TM</sup>.

External capacitors are usually added to the output of the module for two reasons: to reduce output ripple and noise (see Figure 38) and to reduce output voltage deviations from the steady-state value in the presence of dynamic load current changes. Adding external capacitance however affects the voltage control loop of the module, typically causing the loop to slow down with sluggish response. Larger values of external capacitance could also cause the module to become unstable.

The Tunable Loop<sup>TM</sup> allows the user to externally adjust the voltage control loop to match the filter network connected to the output of the module. The Tunable Loop<sup>TM</sup> is implemented by connecting a series R-C between the VS+ and TRIM pins of the module, as shown in Fig. 45. This R-C allows the user to externally adjust the voltage loop feedback compensation of the module.

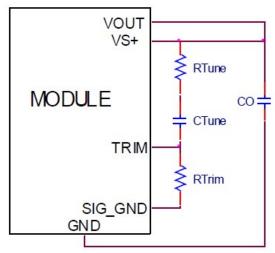


Figure. 45. Circuit diagram showing connection of  $R_{\text{TUNE}}$  and  $C_{\text{TUNE}}$  to tune the control loop of the module

Recommended values of R<sub>TUNE</sub> and C<sub>TUNE</sub> for different output capacitor combinations are given in Table 2. Table 2 shows the recommended values of R<sub>TUNE</sub> and C<sub>TUNE</sub> for different values of ceramic output capacitors up to 1000µF that might be needed for an application to meet output ripple and noise requirements. Selecting R<sub>TUNE</sub> and C<sub>TUNE</sub> according to Table 2 will ensure stable operation of the module. In applications with tight output voltage limits in the presence of dynamic current loading, additional output capacitance will be required. Table 3 lists recommended values of R<sub>TUNE</sub> and C<sub>TUNE</sub> in order to meet 2% output voltage deviation limits for some common output voltages in the presence of a 6A to 12A step change (50% of full load), with an input voltage of 12V.

Please contact your OmniOn Critical Power technical representative to obtain more details of this feature as well as for guidelines on how to select the right value of external R-C to tune the module for best transient performance and stable operation for other output capacitance values.

	C。	3x47µF	4x47µF	6x47μF	10x47µF	20x47μF
	RTUNE	300	300	300	300	300
ĺ	C <sub>TUNE</sub>	680pF	820pF	1200pF	2700pF	5600pF

Table 2. General recommended values of of  $R_{\text{TUNE}}$  and  $C_{\text{TUNE}}$  for  $V_{\text{in}}$ =12V and various external ceramic capacitor combinations



#### Tunable Loop™ (continued)

V <sub>o</sub>	5V	3.3V	2.5V	1.8V	1.2V	0.6V
С。	6x47µf Ceramic	3x47µF+ 1x330µF Polymer	4x47µF+ 1x330µF Polymer	4x47µF+ 2x330µF Polymer	4x47µF+ 3x330µF Polymer	3x47µF+ 3x330µF Polymer
R <sub>TUNE</sub>	300	300	300	300	300	300
C <sub>TUNE</sub>	1200pF	1800pF	2700pF	8200pF	10nF	47nF
ΔV	89mV	62mV	49mV	33mV	24mV	11mV

Table 3. Recommended values of  $R_{\text{TUNE}}$  and  $C_{\text{TUNE}}$  to obtain transient deviation of 2% of  $V_{\text{out}}$  for a 6A step load with  $V_{\text{in}}$ =12V.

Note: The capacitors used in the Tunable Loop tables are 47  $\mu$ F/2 m $\Omega$  ESR ceramic and 330  $\mu$ F/9 m $\Omega$  ESR polymer capacitors.

#### **Digital Feature Descriptions**

#### PMBus Interface Capability

The 12A Digital Pico SlimLynx<sup>™</sup> Open Frame power modules have a PMBus interface that supports both communication and control. The PMBus Power Management Protocol Specification can be obtained from <a href="https://www.pmbus.org">www.pmbus.org</a>. The modules support a subset of version 1.1 of the specification (see Table 6 for a list of the specific commands supported). Most module parameters can be programmed using PMBus and stored as defaults for later use.

All communication over the module PMBus interface must support the Packet Error Checking (PEC) scheme. The PMBus master must generate the correct PEC byte for all transactions, and check the PEC byte returned by the module.


The module also supports the SMBALERT# response protocol whereby the module can alert the bus master if it wants to talk. For more information on the SMBus alert response protocol, see the System Management Bus (SMBus) specification.

The module has non-volatile memory that is used to store configuration settings. Not all settings programmed into the device are automatically saved into this non-volatile memory, only those specifically identified as capable of being stored can be saved (see Table 6 for which command parameters can be saved to non-volatile storage).

#### **PMBus Data Format**

For commands that set thresholds, voltages or report such quantities, the module supports the "Linear" data

format among the three data formats supported by PMBus. The Linear Data Format is a two byte value with an 11-bit, two's complement mantissa and a 5-bit, two's complement exponent. The format of the two data bytes is shown below:



The value is of the number is then given by

Value = Mantissa x 2 Exponent

#### **PMBus Addressing**

The power module can be addressed through the PMBus using a device address. The module has 64 possible addresses (0 to 63 in decimal) which can be set using resistors connected from the ADDRO and ADDR1 pins to SIG\_GND. Note that some of these addresses (0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11 12, 40, 44, 45, 55 in decimal) are reserved according to the SMBus specifications and may not be useable. The address is set in the form of two octal (0 to 7) digits, with each pin setting one digit. The ADDR1 pin sets the high order digit and ADDRO sets the low order digit. The resistor values suggested for each digit are shown in Table 4 (1% tolerance resistors are recommended). Note that if either address resistor value is outside the range specified in Table 4, the module will respond to address 127.

Digit	Resistor Value (KΩ)
0	10
1	15.4
2	23.7
3	36.5
4	54.9
5	84.5
6	130
7	200

Table 4

The user must know which I<sup>2</sup>C addresses are reserved in a system for special functions and set the address of the module to avoid interfering with other system operations. Both 100kHz and 400kHz bus speeds are supported by the module. Connection for the PMBus interface should follow the High Power DC specifications given in section 3.1.3 in the SMBus specification V2.0 for the 400kHz bus speed or the Low Power DC specifications in section 3.1.2. The complete SMBus specification is available from the SMBus web site, **SMBus.org** 



#### PMBus Addressing (continued)

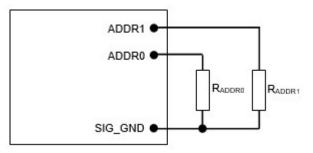


Figure 46. Circuit showing connection of resistors used to set the PMBus address of the module.

#### PMBus Enabled On/Off

The module can also be turned on and off via the PMBus interface. The OPERATION command is used to actually turn the module on and off via the PMBus, while the ON\_OFF\_CONFIG command configures the combination of analog ON/OFF pin input and PMBus commands needed to turn the module on and off. Bit [7] in the OPERATION command data byte enables the module, with the following functions:

0: Output is disabled

1: Output is enabled

This module uses the lower five bits of the ON\_OFF\_CONFIG data byte to set various ON/OFF options as follows:

<b>Bit Position</b>	4	3	2	1	0
Access	r/w	r/w	r/w	r/w	r
Function	PU	CMD	CPR	POL	CPA
Default Value	1	0	1	1	1

PU: Sets the default to either operate any time input power is present or for the ON/OFF to be controlled by the analog ON/OFF input and the PMBus OPERATION command. This bit is used together with the CP, CMD and ON bits to determine startup.

<b>Bit Value</b>	Action
0	Module powers up any time power is present regardless of state of the analog ON/OFF pin
U	regardless of state of the analog ON/OFF pin
	Module does not power up until
1	commanded by the analog ON/OFF pin and the OPERATION command as programmed
ļ	the OPERATION command as programmed
	in bits [2:0] of the ON_OFF_CONFIG register.

CMD: The CMD bit controls how the device responds to the OPERATION command.

Bit Value Action			
0	Module ignores the ON bit in the		
0	OPERATION command		
1	Module responds to the ON bit in the		
1	OPERATION command		

CPR: Sets the response of the analog ON/OFF pin. This bit is used together with the CMD, PU and ON bits to determine startup.

Bit Value	Action
0	Module ignores the analog ON/OFF pin, i.e.ON/OFF is only controlled through the PMBUS via the
1	Module requires the analog ON/OFF pin to be asserted to start the unit


#### PMBus Adjustable Soft Start Rise Time

The soft start rise time can be adjusted in the module via PMBus. When setting this parameter, make sure that the charging current for output capacitors can be delivered by the module in addition to any load current to avoid nuisance tripping of the overcurrent protection circuitry during startup. The TON\_RISE command sets the rise time in ms, and allows choosing soft start times between 600µs and 9ms, with possible values listed in Table 5. Note that the exponent is fixed at -4 (decimal) and the upper two bits of the mantissa are also fixed at 0.

Rise Time	Exponent	Mantissa
600 <b>µ</b> s	11100	00000001010
900µs	11100	00000001110
1.2ms	11100	00000010011
1.8ms	11100	00000011101
2.7ms	11100	00000101011
4.2ms	11100	00001000011
6.0ms	11100	00001100000
9.0ms	11100	00010010000

#### **Output Voltage Adjustment Using the PMBus**

The VOUT\_SCALE\_LOOP parameter is important for a number of PMBus commands related to output voltage trimming, margining, over/under voltage protection and the PGOOD thresholds. The output voltage of the module is set as the combination of the voltage divider formed by  $R_{\text{Trim}}$  and a  $20 k\Omega$  upper divider resistor inside the module, and the internal reference voltage of the module. The reference voltage  $V_{\text{REF}}$  is nominally set at 600mV, and the output regulation voltage is then given by





## Output Voltage Adjustment Using the PMBus (continued)

Hence the module output voltage is dependent on the value of RTrim which is connected external to the module. The information on the output voltage divider ratio is conveyed to the module through the VOUT\_SCALE\_LOOP parameter which is calculated as follows:

The VOUT\_SCALE\_LOOP parameter is specified using the "Linear" format and two bytes. The upper five bits [7:3] of the high byte are used to set the exponent which is fixed at –9 (decimal). The remaining three bits of the high byte [2:0] and the eight bits of the lower byte are used for the mantissa. The default value of the mantissa is 00100000000 corresponding to 256 (decimal), corresponding to a divider ratio of 0.5. The maximum value of the mantissa is 512 corresponding to a divider ratio of 1. Note that the resolution of the VOUT SCALE LOOP command is 0.2%.

When PMBus commands are used to trim or margin the output voltage, the value of  $V_{\text{REF}}$  is what is changed inside the module, which in turn changes the regulated output voltage of the module.

The nominal output voltage of the module can be adjusted with a minimum step size of 0.4% over a ±25% range from nominal using the VOUT\_TRIM command over the PMBus.

The VOUT\_TRIM command is used to apply a fixed offset voltage to the output voltage command value using the "Linear" mode with the exponent fixed at–10 (decimal). The value of the offset voltage is given by

$$V_{OUT(offset)} = VOUT\_TRIM X 2^{-10}$$

This offset voltage is added to the voltage set through the divider ratio and nominal  $V_{\text{REF}}$  to produce the trimmed output voltage. The valid range in two's complement for this command is –4000h to 3FFFh. The high order two bits of the high byte must both be either 0 or 1. If a value outside of the +/-25% adjustment range is given with this command, the module will set it's output voltage to the nominal value (as if VOUT\_TRIM had been set to 0), assert

SMBALRT#, set the CML bit in STATUS\_BYTE and the invalid data bit in STATUS\_CML.

#### **Output Voltage Margining Using the PMBus**

The module can also have its output voltage margined via PMBus commands. The command VOUT\_MARGIN\_HIGH sets the margin high voltage, while the command VOUT\_MARGIN\_LOW sets the margin low voltage. Both the VOUT\_MARGIN\_HIGH and VOUT\_MARGIN\_LOW commands use the "Linear" mode with the exponent fixed at –10 (decimal). Two bytes are used for the mantissa with the upper bit [7] of the high byte fixed at 0. The actual margined output voltage is a combination of the VOUT\_MARGIN\_HIGH or VOUT\_MARGIN\_LOW and the VOUT\_TRIM values as shown below

 $V_{OUT(MH)}$  = (VOUT\_MARGIN\_HIGH+ VOUT\_TRIM) X 2<sup>-10</sup>

V<sub>OUT(ML)</sub> = (VOUT\_MARGIN\_LOW+ VOUT\_TRIM) X 2<sup>-10</sup>

Note that the sum of the margin and trim voltages cannot be outside the ±25% window around the nominal output voltage. The data associated with VOUT\_MARGIN\_HIGH and VOUT\_MARGIN\_LOW can be stored to non-volatile memory using the STORE\_DEFAULT\_ALL command.

The module is commanded to go to the margined high or low voltages using the OPERATION command. Bits [5:2] are used to enable margining as follows:

00XX: Margin Off

0101: Margin Low (Ignore Fault) 0110: Margin Low (Act on Fault) 1001: Margin High (Ignore Fault) 1010: Margin High (Act on Fault)

### PMBus Adjustable Overcurrent Warning

The module can provide an overcurrent warning via the PMBus. The threshold for the overcurrent warning can be set using the parameter IOUT\_OC\_WARN\_LIMIT. This command uses the "Linear" data format with a two byte data word where the upper five bits [7:3] of the high byte represent the exponent and the remaining three bits of the high byte [2:0] and the eight bits in the low byte represent the mantissa. The exponent is fixed at –1 (decimal). The upper five bits of the mantissa are fixed at 0 while the lower six bits are programmable. Note that the actual value for IOUT\_OC\_WARN\_LIMIT will vary from module to module due to calibration during production test,



#### PMBus Adjustable Overcurrent Warning (continued)

The resolution of this warning limit is 500mA. The value of the IOUT\_OC\_WARN\_LIMIT can be stored to non-volatile memory using the STORE\_DEFAULT\_ALL command.

#### Temperature Status via PMBus

The module can provide information related to temperature of the module through the STATUS\_TEMPERATURE command. The command returns information about whether the pre-set over temperature fault threshold and/or the warning threshold have been exceeded.

## PMBus Adjustable Output Over and Under Voltage Protection

The module has output over and under voltage protection capability. The PMBus command VOUT\_OV\_FAULT\_LIMIT is used to set the output over voltage threshold from four possible values: 108%, 110%, 112% or 115% of the commanded output voltage. The command VOUT\_UV\_FAULT\_LIMIT sets the threshold that causes an output under voltage fault and can also be selected from four possible values: 92%, 90%, 88% or 85%. The default values are 112% and 88% of commanded output voltage. Both commands use two data bytes formatted as two's complement binary integers. The "Linear" mode is used with the exponent fixed to –10 (decimal) and the effective over or under voltage trip points given by:

 $V_{OUT(OV\_REQ)} = (VOUT\_OV\_FAULT\_LIMIT) \times 2^{-10}$ 

 $V_{OUT(UV\_REQ)} = (VOUT\_UV\_FAULT\_LIMIT) \times 2^{-10}$ 

Values within the supported range for over and undervoltage detection thresholds will be set to the nearest fixed percentage. Note that the correct value for VOUT\_SCALE\_LOOP must be set in the module for the correct over or under voltage trip points to be calculated.

In addition to adjustable output voltage protection, the 12A Digital Pico SlimLynx™ Open Frame module can also be programmed for the response to the fault. The VOUT\_OV\_FAULT RESPONSE and VOUT\_UV\_FAULT\_RESPONSE commands specify the response to the fault. Both these commands use a single data byte with the possible options as shown below.

1. Continue operation without interruption (Bits [7:6] = 00, Bits [5:3] = xxx)

- Continue for four switching cycles and then shut down if the fault is still present, followed by no restart or continuous restart (Bits [7:6] = 01, Bits [5:3] = 000 means no restart, Bits [5:3] = 111 means continuous restart)
- Immediate shut down followed by no restart or continuous restart (Bits [7:6] = 10, Bits [5:3] = 000 means no restart, Bits [5:3] = 111 means continuous restart).
- 4. Module output is disabled when the fault is present and the output is enabled when the fault no longer exists (Bits [7:6] = 11, Bits [5:3] = xxx).

Note that separate response choices are possible for output over voltage or under voltage faults.

#### PMBus Adjustable Input Undervoltage Lockout

The module allows adjustment of the input under voltage lockout and hysteresis. The command VIN\_ON allows setting the input voltage turn on threshold, while the VIN\_OFF command sets the input voltage turn off threshold. For the VIN\_ON command, possible values are 2.75V, and 3V to 14V in 0.5V steps. For the VIN\_OFF command, possible values are 2.5V to 14V in 0.5V steps. If other values are entered for either command, they will be mapped to the closest of the allowed values.

VIN\_ON must be set higher than VIN\_OFF. Attempting to write either VIN\_ON lower than VIN\_OFF or VIN\_OFF higher than VIN\_ON results in the new value being rejected, SMBALERT being asserted along with the CML bit in STATUS\_BYTE and the invalid data bit in STATUS\_CML.

Both the VIN\_ON and VIN\_OFF commands use the "Linear" format with two data bytes. The upper five bits represent the exponent (fixed at -2) and the remaining 11 bits represent the mantissa. For the mantissa, the four most significant bits are fixed at 0.

#### **Power Good**

The module provides a Power Good (PGOOD) signal that is implemented with an open-drain output to indicate that the output voltage is within the regulation limits of the power module. The PGOOD signal will be de-asserted to a low state if any condition such as overtemperature, overcurrent or loss of regulation occurs that would result in the output voltage going outside the specified thresholds.



#### Power Good (continued)

The PGOOD thresholds are user selectable via the PMBus (the default values are as shown in the Feature Specifications Section). Each threshold is set up symmetrically above and below the nominal value. The POWER\_GOOD\_ON command sets the output voltage level above which PGOOD is asserted (lower threshold). For example, with a 1.2V nominal output voltage, the POWER\_GOOD\_ON threshold can set the lower threshold to 1.14 or 1.1V. Doing this will automatically set the upper thresholds to 1.26 or 1.3V.

The POWER\_GOOD\_OFF command sets the level below which the PGOOD command is de-asserted. This command also sets two thresholds symmetrically placed around the nominal output voltage. Normally, the POWER\_GOOD\_ON threshold is set higher than the POWER\_GOOD\_OFF threshold.

Both POWER\_GOOD\_ON and POWER\_GOOD\_OFF commands use the "Linear" format with the exponent fixed at -10 (decimal). The two thresholds are given by

V<sub>OUT(PGOOD\_ON)</sub> = (POWER\_GOOD\_ON) X 2<sup>-10</sup>

V<sub>OUT(PGOOD OFF)</sub> = (POWER\_GOOD\_OFF) X 2<sup>-10</sup>

Both commands use two data bytes with bit [7] of the high byte fixed at 0, while the remaining bits are r/w and used to set the mantissa using two's complement representation. Both commands also use the VOUT\_SCALE\_LOOP parameter so it must be set correctly. The default value of POWER\_GOOD\_ON is set at 1.1035V and that of the POWER\_GOOD\_OFF is set at 1.08V. The values associated with these commands can be stored in non-volatile memory using the STORE\_DEFAULT\_ALL command.

The PGOOD terminal can be connected through a pullup resistor (suggested value  $100 \text{K}\Omega$ ) to a source of  $5\text{V}_{DC}$  or lower.

## Measurement of Output Current, Output Voltage and Input Voltage

The module is capable of measuring key module parameters such as output current and voltage and input voltage and providing this information through the PMBus interface. Roughly every 200µs, the module makes 16 measurements each of output current, voltage and input voltage. Average values of of these 16 measurements are then calculated and placed in the appropriate registers. The values in the registers can then be read using the PMBus interface.

#### Measuring Output Current Using the PMBus

The module measures current by using the inductor winding resistance as a current sense element. The inductor winding resistance is then the current gain factor used to scale the measured voltage into a current reading. This gain factor is the argument of the IOUT\_CAL\_GAIN command, and consists of two bytes in the linear data format. The exponent uses the upper five bits [7:3] of the high data byte in two-s complement format and is fixed at –15 (decimal). The remaining 11 bits in two's complement binary format represent the mantissa.

The current measurement accuracy is also improved by each module being calibrated during manufacture with the offset in the current reading. The IOUT\_CAL\_OFFSET command is used to store and read the current offset. The argument for this command consists of two bytes composed of a 5-bit exponent (fixed at -4d) and a 11-bit mantissa. This command has a resolution of 62.5mA and a range of -4000mA to +3937.5mA. During manufacture, each module is calibrated by measuring and storing the current gain factor and offset into non-volatile storage.

The READ\_IOUT command provides module average output current information. This command only supports positive or current sourced from the module. If the converter is sinking current a reading of 0 is provided. The READ\_IOUT command returns two bytes of data in the linear data format. The exponent uses the upper five bits [7:3] of the high data byte in two-s complement format and is fixed at – 4 (decimal). The remaining 11 bits in two's complement binary format represent the mantissa with the 11th bit fixed at 0 since only positive numbers are considered valid.

Note that the current reading provided by the module is not corrected for temperature. The temperature corrected current reading for module temperature  $T_{\text{Module}}$  can be estimated using the following equation

$$I_{OUT,CORR} = \frac{I_{REAR\_OUT}}{1+[(T_{IND}-30) \times 0.00393]}$$



## Measuring Output Current Using the PMBus (continued)

where I<sub>OUT\_CORR</sub> is the temperature corrected value of the current measurement, I<sub>READ\_OUT</sub> is the module current measurement value, T<sub>IND</sub> is the temperature of the inductor winding on the module. Since it may be difficult to measure T<sub>IND</sub>, it may be approximated by an estimate of the module temperature.

#### Measuring Output Voltage Using the PMBus

The module can provide output voltage information using the READ\_VOUT command. The command returns two bytes of data all representing the mantissa while the exponent is fixed at -10 (decimal).

During manufacture of the module, offset and gain correction values are written into the non-volatile memory of the module. The command VOUT\_CAL\_OFFSET can be used to read and/or write the offset (two bytes consisting of a 16- bit mantissa in two's complement format) while the exponent is always fixed at -10 (decimal). The allowed range for this offset correction is -125 to 124mV. The command VOUT\_CAL\_GAIN can be used to read and/or write the gain correction - two bytes consisting of a five-bit exponent (fixed at -8) and a 11-bit mantissa. The range of this correction factor is -0.125V to +0.121V, with a resolution of 0.004V. The corrected output voltage reading is then given by:

V<sub>OUT</sub> Final = [V<sub>OUT</sub> (Initial) X (1 + VOUT\_CAL\_GAIN)] + VOUT\_CAL\_OFFSET

#### Measuring Input Voltage Using the PMBus

The module can provide output voltage information using the READ\_VIN command. The command returns two bytes of data in the linear format. The upper five bits [7:3] of the high data form the two's complement representation of the exponent which is fixed at –5 (decimal). The remaining 11 bits are used for two's complement representation of the mantissa, with the 11th bit fixed at zero since only positive numbers are valid.

During module manufacture, offset and gain correction values are written into the non-volatile memory of the module. The command VIN\_CAL\_OFFSET can be used to read and/or write the offset - two bytes consisting of a five- bit exponent (fixed at -5) and all-bit mantissa in two's complement format. The allowed range for this offset correction is -

2 to 1.968V, and the resolution is 32mV. The command VIN\_CAL\_GAIN can be used to read and/or write the gain correction - two bytes consisting of a five-bit exponent (fixed at -8) and a 11-bit mantissa. The range of this correction factor Is -0.125V to +0.121V, with a resolution of 0.004V. The corrected output voltage reading is then given by:

 $V_{IN}$  Final = [ $V_{IN}$  (Initial) X (1 + VIN\_CAL\_GAIN)] + VIN\_CAL\_OFFSET

#### Reading the Status of the Module using the PMBus

The module supports a number of status information commands implemented in PMBus. However, not all features are supported in these commands. Al in the bit position indicates the fault that is flagged.

STATUS\_BYTE: Returns one byte of information with a summary of the most critical device faults.

<b>Bit Position</b>	Flag	<b>Default Value</b>
7	×	0
6	OFF	0
5	V <sub>OUT</sub> Overvoltage	0
4	I <sub>OUT</sub> Overcurrent	0
3	V <sub>IN</sub> Undervoltage	0
2	Temperature	0
1	CML (Comm. Memory Fault)	0
0	None of the above	0

STATUS\_WORD: Returns two bytes of information with a summary of the module's fault/warning conditions.

<b>Bit Position</b>	Flag	<b>Default Value</b>
7	X	0
6	OFF	0
5	V <sub>OUT</sub> Overvoltage	0
4	I <sub>o∪T</sub> Overcurrent	0
3	V <sub>IN</sub> Undervoltage	0
2	Temperature	0
1	CML (Comm. Memory Fault)	0
0	None of the above	0

Low Byte

<b>Bit Position</b>	Flag	<b>Default Value</b>
7	V <sub>o∪T</sub> fault or warning	0
6	I <sub>OUT</sub> fault for warning	0
5	X	0
4	X	0
3	Power_GOOD# (is negated)	0
2	X	0
1	X	0
0	X	0

**High Byte** 



## Reading the Status of the Module using the PMBus (continued)

STATUS\_VOUT: Returns one byte of information relating to the status of the module's output voltage related faults.

<b>Bit Position</b>	Flag	Default Value
7	V <sub>o∪T</sub> OV Fault	0
6	Χ	0
5	Χ	0
4	V <sub>o∪⊤</sub> UV Fault	0
3	Χ	0
2	Х	0
1	X	0
0	X	0

STATUS\_IOUT: Returns one byte of information relating to the status of the module's output voltage related faults.

Bit Position	Flag	Default Value
7	I <sub>оит</sub> ОС Fault	0
6	X	0
5	Iout OC Warning	0
4	X	0
3	X	0
2	X	0
1	X	0
0	X	0

STATUS\_TEMPERATURE: Returns one byte of information relating to the status of the module's temperature related faults.

<b>Bit Position</b>	Flag	<b>Default Value</b>
7	OT Fault	0
6	OT Warning	0
5	X	0
4	X	0
3	Х	0
2	Χ	0
1	X	0
0	X	0

STATUS\_CML: Returns one byte of information relating to the status of the module's communication related faults.



Bit Position	Flag	Default Value
7	Invalid/Unsupported Command	0
6	Invalid/Unsupported Command	0
5	Packet Error Check Failed	0
4	X	0
3	X	0
2	X	0
1	Other Communication Fault	0
0	X	0

MFR\_VIN\_MIN: Returns minimum input voltage as two data bytes of information in Linear format (upper five bits are exponent – fixed at -2, and lower 11 bits are mantissa in two's complement format – fixed at 12)

MFR\_VOUT\_MIN: Returns minimum output voltage as two data bytes of information in Linear format (upper five bits are exponent – fixed at -10, and lower 11 bits are mantissa in two's complement format fixed at 614)

MFR\_SPECIFIC\_00: Returns information related to the type of module and revision number. Bits [7:2] in the Low Byte indicate the module type (000111 corresponds to the PxDT006 series of module), while bits [7:3] indicate the revision number of the module.

<b>Bit Position</b>	Flag	<b>Default Value</b>
7:2	Module Name	001011
1:0	Reserved	10

**Low Byte** 

<b>Bit Position</b>	Flag	<b>Default Value</b>
7:3	Module Revision Number	None
2:0	Reserved	000

**High Byte** 



## **Summary of Supported PMBus Commands**

Please refer to the PMBus 1.1 specification for more details of these commands.

Hex Code	Command	Brief Description									Non-Volatile Memory Storage
		Turn Module o	n or o	ff. Also	o used	to ma	rgin th	ne out	put vo	oltage	o to lago
		Format			Un	siane	d Bina	irv			
01	OPERATION	Bit Position	7	6	5	4	3	2	1	0	
01	OPERATION	Access	r/w	r	r/w	r/w	r/w		r	r	
		Function	On	Χ		Ma	rgin	•	Х	Х	
		Default Value	0	0	0	0	0	0	Χ	Χ	
		Configures the analog ON/OF						nbina	tion o	f	
		Format				nsigne	d Bina				
02	ON_OFF_CONFIG	Bit Position	7	6	5	4		2	1	0	YES
		Access	r	r	r	r/\				r	
		Function	X 0	X 0	X 0	pı	ı cma	d cpr	pol	сра	
		Default Value Clear any fault		_		n haar	Ŭ	co rol	02000	tho	
03	CLEAR_FAULTS	SMBALERT# si								trie	
		Used to contro								the	
		current registe									
		matches the v			data by	te int	o non-	volatil	e mer	mory	
		(EEPROM) on t	the m	odule							
		Format			_		d Bina				
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r/w	r/w	r/w	X	X	X	X	X	
		Function	bit7 0	bit6 0	bit5	X	X	X	X	X	
		Default Value	U	U	0		٨			^	
		Bit5: 0 – Enable	es all v	writes	as peri	mitted	d in bit	6 or b	it7		
10	WRITE_PROTECT	1 – Disab	les all	writes	excep	t the	WRITE	_PRO	TECT,		YES
		OPERATION a	nd								
		ON_OFF	_CON	FIG (b	it 6 and	d bit7	must l	oe 0)			
		Bit 6: 0 – Enab	les all	writes	as per	mitte	d in bi	5 or b	it7		
		1 – Disab		writes	excep	t for t	he WR	ITE_P	ROTE	CT	
		and OPERATIO									
		commar	-				-				
		Bit7: 0 – Enabl									
		1 – Disab		writes	excep	t for t	he WR	ITE_P	ROTE	CT	
		command (bit		ha 0\							
		and bit6 Copies all curre			setting	ns in t	ne mo	ان عادیات	nto no	ın-	
11	STORE_DEFAULT_ALL	volatile memo									
		for the comma	and to	execu	ite.						
12	RESTORE_DEFAULT_ALL	Restores all current register settings in the module from									
14	NESTORE_DELAUEL_ALL	values in the module non-volatile memory (EEPROM)  Copies the current register setting in the module whose									
		command coc volatile memo						.a byte	OJINI S	non-	
13	STORE_DEFAULT_CODE	Bit Position	7	6	5	4	3	2	1	0	
	_	Access	W	W W	5 W	4 W	<u>5</u> 	 W	W	W	
		Function Command Code									
		TUTICUOTT		hle 6				, ,			





Hex Code	Command			Brie	f Desc	riptio	n				Non-Volatile Memory Storage
		Restores the co command cod value in the mo	e mat	tches tl	ne val	ue in th	ne dat	a byte	e from		Memory Storage
14	RESTORE_DEFAULT_CODE	Bit Position Access	7 W	6 W	5 W	4 W	3 W	2 W	1 W	0 W	
		Function	•	• • • • • • • • • • • • • • • • • • • •		mmar		1	I **		
		The module ha These values ca					d Expo	onent	set to	-10.	
20	VOUT_MODE	Bit Position	7	6	5	4	3	2	1	0	
		Access Function	r	r Mode	r	r	r	r	r nt	r	
		Default Value	0	0	0	1	0	pone 1	1 1	0	
		Apply a fixed o value. Exponer	ffset v	oltage xed at -	to the	e offse	ut volt t is VC	UT_T	RIMx2	and	
		Format			_	's com	_		inary		
		Bit Position	7 r/w	6	5 r/w	4	7 r/w	2 r/w	1 1	0	
22	VOUT_TRIM	Access Function	r/w	r/w	I/W	r/w High		r/w	r/w	r/w	YES
		Default Value	0	0	0	0	0	0	0	0	
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r/w	r/w	r/w	r/w	r/w	r/w	r/w	r/w	
		Function	.,	.,	1 .,	Low I		.,	.,	.,	
		Default Value	0	0	0	0	0	0	0	0	
		Sets the target Exponent is fix (VOUT_MARGII	ed at	-10. The	e offse	t is		out hi	igh.		
		Format		Linea	r, two	's com	plem	ent b	inary		
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r/w	r/w	r/w	r/w	r/w	r/w	r/w	
25	VOUT_MARGIN_HIGH	Function		1	1	High I		г	1		YES
		Default Value	0	0	0	0	0	1	0	1	
		Bit Position	7	6	5 r/w	4	3	2	7	0	
		Access Function	r/w	r/w	r/w	r/w Low E	r/w	r/w	r/w	r/w	
		Default Value	0	1	0	0	0	1	1	1	
		Deladit value			U			'	'	' '	
		Sets the target Exponent is fix	ed at	-10. The	e offse	t is		put lo	W.		
		(VOUT_MARGII	N_LO'								
		Format		Linea	r, two	's com	7		inary		
		Bit Position	7	6	5	4	3	2	1	0	
20	VOLITA A DOING COM	Access	r	r/w	r/w	r/w	r/w	r/w	r/w	r/w	\/50
26	VOUT_MARGIN_LOW	Function		_		High I		l 1			YES
		Default Value Bit Position	7	0 6	<u> </u>	0 4	3	2	0	0	
		Access	r/w	r/w	r/w	r/w	r/w	r/w	r/w	r/w	
		Function	1/ 00	1 / VV	1 / VV	Low E		1/ ۷۷	1/ ۷۷	1/ VV	
		Default Value	0	1	0	1	0	0	0	1	





Hex	Command			Drie	f Door	windia.					Non-Volatile
Code	Command			Brie	r Desc	ription	1				<b>Memory Storage</b>
		Sets the scaling									
		resistor divider	ratio	. VOUT	_SCAL	E_LOO	P = 0.0	6(V)/V	′ <sub>оит</sub> (V)		
		Format		Linea	r, two	's com	plem	ent b	inary		
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r	r	r	r	r	r/w	r/w	
29	VOUT SCALE LOOP	Function			xpone				1antis	sa	YES
23	V 0 0 1 _ 0 0 1 _ 0 0 1	Default Value	1	0	1	1	1	0	0	1	123
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r/w	r/w	r/w	r/w	r/w	r/w	r/w	r/w	
		Function				Mant	1				
		Default Value	0	0	0	0	0	0	0	0	
		Sets the value	of inn	ut volt	ago at	which	tho m	a dul	o turn	6 O D	
		This must be h									
			ilgilici	criari v	111_01	r. Sup	portec	a vaic	ics are	-	
		• 2.75V									
		• 3V to 18V ir	n incre	ement	s of 0.5	5V					
		Format		Linea	r, two	's com	plemo	ent bi	nary		
		Bit Position	7	6	5	4	3	2	1	0	
35	VIN_ON	Access	r	r	r	r	r	r	r	r	YES
		Function		E	xpone	nt		N	<u>lantis</u>	sa	
		Default Value	1	1	1	1	0	0	0	0	
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r/w	r/w	r/w	r/w	r/w	r/w	r/w	
		Function	0		0	Mant	issa T	Τ _	1 1	-	
		Default Value	U	0	U	0	I	0			
		Coto the violue	of in n		200.0+	, , , b i o b	+h o no	ا باد	- +rp	c off	
		Sets the value This must be lo								SOII	
							ortea	varac	,5 arc		
		• 2.5V to 17.5	v in ir				_				
		Format				's com			nary	_	
		Bit Position	7	6	5	4	3	2	1	0	
36	VIN OFF	Access	r	r	r	r	r	r	r	r	YES
		Function Default Value	1	1	xpone	nı 1	0	0	1antis 0	sa O	
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r/w	r/w	r/w	r/w	r/w	r/w	r/w	
		Function		., .,	.,	Mant		.,	.,	.,	
		Default Value	0	0	0	0	1	0	1	0	
			L. L.		<u> </u>						
		Returns the va	lue of	the ga	in cor	rection	term	used	to co	rrect	
		the measured	outpu								
		Format		Linea		's com			inary		
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r	r	r	r	r	<u>r</u>	r/w	
38	IOUT_CAL_GAIN	Function	-		xpone		-		1antis		YES
		Default Value		0	0	0	7	0	0	V	
		Bit Position	7 r/w	6 r/w	5 r/w	r/w	3 r/w	2 r/w	r/w	o r/w	
		Access   r/w   r/w   r/w   r/w   r/w   r/w   r/w   r/w									
		Default Value	n								
		20.2310 74140				sed on		, Jan			
	ı	ı									1





Hex Code	Command	Brief Description									Non-Volatile Memory Storage
		Returns the val	ue of	the o	ffset co	orrectio	on terr	n use	d to c	orrect	<b>,</b> , , , , ,
		the measured o									
		Format				o's con	nplem	ent b	inary		
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r	r	r	r	r/w	r	r	
70	IOLIT CAL OFFCET	Function		Е	xpone	ent		M	1antis	sa	VEC
39	IOUT_CAL_OFFSET	Default Value	1	1	1	0	0	V	0	0	YES
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r	r/w	r/w	r/w	r/w	r/w	r/w	
		Function		1 1		Man			<b>.</b> .		
		Default Value	0	0	V:	Variab	le bas calibra		facto	ry	
		Sets the voltage	e leve	el for a	n outp	ut ove	rvolta	ge fau	ılt.		
		Exponent is fixe				ed perc	entag	es of 1	108%,	110%,	
		112%and 115% ar	re ava	ilable							
		Format		Line	ar, two	o's con	nplem	ent b	inary		
		Bit Position	7	6	5	4	3	2	1	0	
40	VOUT OV FAULT LIMIT	Access	r	r/w	r/w	r/w	r/w	r/w	r/w	r/w	YES
40	VOOT_OV_I AOET_EIMIT	Function		1	1	High				1	TLS
		Default Value	0	0	0	0	0	1	0	1	
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r/w	r/w	r/w	r/w	r/w	r/w	r/w	r/w	
		Function		_		Low	Byte	Τ _	1 1		
		Default Value Instructs the m	0	0	0	0	<u> </u>	0		0	
41	VOUT_OV_FAULT_ RESPONSE	output overvolt 00- Module cor 01- Module cor shuts down if f 01- Module shu 11 - Module shu RS[2:0] 000 - Module c 111- Module g Format Bit Position	tage f ntinue ault p uts do its do does r oes tl	Fault. Thes with the sopersist own arms with arms arms attentions.	The opthout in eration is not respond attention in the computation in	tions a nterrup n for 4 s ponds t mpts t to resta nal star	re: RSI otion switch to RS[2 o resta art	P[1:0] ing cy 2:0] art ontinu	/cles a	and	YES
		Access	r/w	r/	w r	/w r/	w r,	/w	r r	r	
		Function Default Value	RSP	ij RSI	2[0] RS	S[2] RS	5[I]   RS	1 .	x x 1 0		
		<u>'</u>		1.6			1	<u> </u>	·	0	
		Sets the voltage Exponent is fixe 88%and 85% ar	ed at	-10. Fo	our fixe	ed perc	entag	es of 9	92%, 9		
		Format				's con			inary		
		Bit Position	7	6	5	4	3	2	1	0	
44	44 VOUT_UV_FAULT_LIMIT	Access	r	r/w	r/w	r/w	r/w	r/w	r/w	r/w	YES
		Function	0	0		High		1	0	0	
		Default Value Bit Position	7	6	5	0	3	2	1	0	
		Access	r/w	r/w	r/w	r/w	r/w	r/w	r/w	r/w	
		Function	1/ 4 4	1 / ۷ ۷	1/ ۷ ۷	Low		1/ ۷۷	1/ ۷۷	1/ ۷۷	
		Default Value	1	0	0	0	1	1	1	1	
L	L	1				1		1	1		<u> </u>





Hex Code	Command	Brief Description	Non-Volatile Memory Storage
45	VOUT_UV_FAULT_ RESPONSE	Instructs the module on what action to take in response output undervoltage fault.  The options are: RSP[1:0]  02 Module continues without interruption  03 Module continues operation for 4 switching cycles shuts down if fault persists  02 Module shuts down and responds to RS[2:0]  11 – Module shuts down and attempts to restart  RS[2:0]  000 – Module does not attempt to restart  111 - Module goes through normal startup continuous  Format  Unsigned Binary  Bit Position 7 6 5 4 3 2  Access r/w r/w r/w r/w r/w r/w r  Function RSP[1] RSP[0] RS[2] RS[1] RS[0] x  Default Value 0 0 0 0 0 0	s and YES
46	IOUT_OC_FAULT_LIMIT	Sets the output overcurrent fault level in A (cannot be changed)  Format  Linear, two's complement binar  Bit Position 7 6 5 4 3 2 1  Access r r r r r r r r r  Function Exponent Man  Default Value 1 1 1 1 1 0 0  Bit Position 7 6 5 4 3 2 1	
<b>4</b> A	IOUT_OC_WARN_LIMIT	Function         Exponent         Man           Default Value         1         1         1         1         0         0           Bit Position         7         6         5         4         3         2         1           Access         r         r         r/w         r/w         r/w         r/w         r/w         r/w           Function         Mantissa	ry 1 0 r r ntissa 0 0 T 1 0 /w r/w 0 1





Hex Code	Command			Brie	f Desc	riptio	n				Non-Volatile Memory Storage
		Sets the outpu					he PG	00D	oin is		
			СХРО								
		Format				's com			nary	0	
		Bit Position	7	6 r/w	5 r/w	4 r/w	3 r/w	2 r/w	r/w	o r/w	
		Access Function	r	r/w	r/W	High		r/W	r/w	f/W	
		Default Value	0	0	0	0	0	1	0	0	
		Bit Position	7	6	5	4	3	2	1	0	
5E	POWER GOOD ON	Access	r/w	r/w	r/w	r/w	r/w	r/w	r/w	r/w	YES
		Function	., .,	1, **	., ••	Low		., **	1, **	1, **	
		Default Value	0	1	1	0	1	0	1	0	
			- ON	/							
		POWER_GOOI	J_OIN	LEVEL	.5						
		LOW HIGH									
		95% 105%									
		92% 108%									
		90% 110%									
		Sets the outpu					he PG	00D	oin is (	de-	
		asserted low. E	xpon	ent is fi	ixed at	: -10.					
		Format		Linea	r, two	's com	plem	ent bi	inary		
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r/w	r/w	r/w	r/w	r/w	r/w	r/w	
		Function				High		1 -			
		Default Value	7	0	0	0	0	1	0	0	
5F	DOWED COOD OF	Bit Position Access	r/w	6 r/w	5 r/w	4 r/w	3 r/w	2 r/w	1 r/w	O r/w	VEC
5F	POWER_GOOD_OFF	Function	1/ ۷۷	1/ ۷۷	1/ //	Low		1/ ۷۷	1/ ۷۷	1/ ۷۷	YES
		Default Value	0	1	0	1	0	0	1	0	
						1					
		POWER_GOOI	D_OFF	- LEVE	LS						
		LOW HIGH									
		92% 108%									
		90% 110%									
		88% 112%									
		Sets the rise tir									
		Supported valu	ues ar	e 0.6m	s, 0.9n	ns, 1.2n	ns, 1.8r	ns, 2.7	'ms, 4	.2ms,	
		6.0ms, 9.0ms									
		Format				's con			nary		
		Bit Position	7	6	5	4	3	2	1	0	
61	TON_RISE	Access	r	r	r	r	r	r	r Inntic	r/w	YES
		Function Default Value	1	E	xpone	ent O	0	0	1antis: 0	sa O	
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r/w	r/w	r/w	r/w	r/w	r/w	r/w	r/w	
		Function	1,,	1 .,	.,	Mant		1 .,	1 .,	.,	
		Default Value	0	0	1	0	1	0	1	1	

Table 6 (continued)





Hex Code	Command		Brief Description								
		Returns one k critical modu			rmatic	on wi	th a sur	nmary	of the	most	
		Format				Jnsi	gned Bi	nary			
78	STATUS DVTE	Bit Position	7	6	5	4		2	1	0	
/0	STATUS_BYTE	Access	r	r	r	r	r	r	r	r	]
		Flag	X	OFF	V <sub>OUT_</sub>	I <sub>OUT.</sub>	_oc V <sub>IN_U</sub>	v TEM	РСМ	L OTH ER	
		Default Value	0	0	0	0	0	0	0	0	]
		Returns two k module's faul					vith a su	mmar	y of th	е	
		Format			U	nsig	ned Bir	ary			
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r	R	r	r	r	r	r	
79	STATUS WORD	Function	$V_{\text{OUT}}$	I <sub>OUT_OC</sub>	X	Χ	PGOOD	X	X	Х	
/9	STATUS_WORD	Default Value	0	0	0	0	0	0	0	0	
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r	r	r	r	r	r	r	
		Flag	Χ	OFF	$V_{\text{OUT\_OV}}$	I <sub>OUT_OC</sub>	V <sub>IN_UV</sub>	TEMF	CML	OTHER	
		Default Value	0	0	0	0	0	0	0	0	
		Returns one k						tatus d	of the		
		module's out	out v	oltage							
		Format				Unsi	gned Bi				
7A	STATUS_VOUT	Bit Position	7	7	6	5	4	3	2 1	0	
		Access	1		r	r	r		r r		
		Flag	Vou				V <sub>OUT_UV</sub>		X X		
		Default Value				0	0		0   0	0	
		Returns one k module's out						tatus d	of the		
		Format			ı	Unsi	gned Bi	nary			
70	CTATUS IOLIT	Bit Position	7	'	6 5	5	4 3	3 2	1	0	
7B	STATUS_IOUT	Access	r		r	r	r ı	r	r	r	
		Flag	I <sub>OUT</sub>	c_oc 2	X	Γ_OC_ arn	X	X	Х	Х	
		Default Value	e C	) (	0 (	C	0 (	) 0	0	0	]
		Returns one k module's tem			elated	fault	ts		of the		
		Format					gned Bi				
70	STATUS TEMPEDATURE	Bit Position		7	6	5	5 4	3	2	0	_[
''	7D STATUS_TEMPERATURE	Access		r	r	r	r	r	r ı	r	_
		Flag	L	_FAI _T	OT_ WARI		< x	Х	X >	X	
		Default Value	) (	0	0	C	0	0	0 (	0	]





Hex	Command			Briof	Desc	rint	ion						Non-Volatile
Code	Command												Memory Storage
		Returns one by						stat	us	of the			
		module's comr	muni	cation r									
		Format					ned I						
		Bit Position		7	6		5	43				0	
7E	STATUS_CML	Access		r	r		r	rr	r	r Otla a		r	
		Flag	Ir	valid	Inva	Invalid		XX		Othe Comr		Х	
		Tiag	Con	nmand	Da <sup>-</sup>	ta	Fail			Fault		^	
		Default Value		0	0	,	0	0 0	0 0			Ω	
		Returns the val	LIE Of	the inn	uit vo	ltag	e ani				nodi	ااد	
			ide oi	•				'				ile	
		Format					_			t binar		_	
		Bit Position	7	6	5	4	·	3	+	2 1	-+	0	
		Access Function	r	r	r	r		r		r r Mant		r	
88	READ_VIN	Default Value	1	1 1	(pone	ni 1	1	1	-	0 0		0	
		Bit Position	7	6	5	4	_	3	+	2 1		0	
		Access	r	r	r	r		r	_	<u> </u>		r	
		Function					ntis			· ·			
		Default Value	0	0	0	0		0		0 0		0	
		Returns the val			tput v	/olta	ge o	f the	e m	nodule.			
		Exponent is fixe	ea at										
		Format								t binar			
		Bit Position	7	6	5	4		3	-	2 1	_	0	
8B	DEAD VOLT	Access	r	r	r	r		r		r r		r	
ОВ	READ_VOUT	Function Default Value	0	0	0	Ма 0	ntiss	0 0		0 0		0	
		Bit Position	7	6	5	4		3		2 1		0	
		Access	 r	r	r	r		r		r r		r	
		Function		<u> </u>	•		ntiss	<u>.</u> за		<u> </u>			
		Default Value	0	0	0	0		0	(	0 0		0	
		Returns the val	ue of	the ou	tput c	curre	ent o	f the	e m	nodule			
		Format								t binar	У		
		Bit Position	7	6	5	4	_	3		2 1		0	
		Access	r	r	r	r		r	L	r r		r	
		Function		E>	pone	ent				Mant	issa		
8C	READ_IOUT	Default Value	1	1	1	С	-	0	+	0 0	)	0	
		Bit Position	7	6	5	4	÷	3		2 1		0	
		Access	r	r	r	r		r		r r		r	
		Function					ntis			<u> </u>	, 1	_	
		Default Value	0	0	0	С	,	0		0   0		0	
		Returns one by	to in	dicating	n tho	mod	ا مایا	s cc	m	nliant t	0		
		PMBus Spec. 1.			) LI IC I	iiiou	idie I	5 00		Jiiai It t	J		
		Format	΄. σα		Un	sian	ed E	Rina	rv				
98	PMBUS_REVISION	Bit Position	7	6	5	4		3	_	2 1		0	YES
	I MOOS_KEVISION	Access	r	r	r	r		r	1	r r		r	125
		Default Value	0	0	0	1		0	_	0 0		1	
				<u> </u>			1			, -	1		
	1	1											<u> </u>





Hex Code	Command			Brie	ef Des	criptio	n				Non-Volatile Memory Storage
		Returns the m operate at (rea			ut volt	age the	e mod	ule is :	specif	ied to	
		Format		Line	ar. two	o's com	pleme	ent bi	narv		
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r	r	r	r	r	r	r	
AO	MFR_VIN_MIN	Function		E	xpone	ent	1	Ν	1antis	sa	YES
		Default Value	1	1	1	1	0	0	0	0	
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r	r	r	r	r	r	r	
		Function		1	1	Mant	issa	1	1	ı	
		Default Value	0	0	0	0	1	]	0	0	
		Returns the m module (read o		ım out	put vo	ltage p	ossible	e from	n the		
		Format		Line	ar, two	o's com		ent bi	nary		
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r	r	r	r	r	r	r	
A4	MFR_VOUT_MIN	Function				Mant		Τ .	-	T .	YES
		Default Value	0	0	0	0	0	0		0	
		Bit Position Access	7	6 r	5	4 r	3 r	2 r	1 r	0	
		Function	r	r	r	Mant		ı	l I	r	
		Default Value	0	1	1 1	0	0	1	1	0	
		Returns modu		ne info	ormati			)		1 -	
		Format		Line	ar, two	o's com	pleme	ent bi	nary		
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r	r	r	r	r	r	r	
DO	MFR_SPECIFIC_00	Function		1	1	Reser		1	,		YES
		Default Value	X	X	X	Х	X	Χ	X	Χ	
		Bit Position	7	6	5	4	3	2	1	0	
		Access Function	r	r	r Madul	r	r	r	r	r	
		Default Value	0	0	Module T 1	e Name Lo	1 1	1	X	erved X	
		Applies an offs			<u> </u>			<u>   </u>			
		calibrate out o output voltage fixed at -10.	ffset e	errors i	n mod	lule me	easurer	ments	of the	е	
		Format		Line		o's com			nary		
		Bit Position	7	6	5	4	3	2	1	0	
D4	VOUT_CAL_OFFSET	Access	r/w	r	r	r	r	r	r	r	YES
		Function	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \		Ι _	Mant	1		Ι _		
		Default Value	7	0 6	5	0	3	0	0	0	
		Bit Position Access	r/w	r/w	r/w	r/w	r/w	2 r/w	r/w	r/w	
		Function	1/ ۷۷	1/ ۷۷	1/ ۷۷	Mant		1/ ۷۷	1/ ۷۷	1/ ۷۷	
		Default Value	V	V	V	V	V	V	V	V	
				<u> </u>	1		<u> </u>	<u> </u>			





Hex Code	Command			Brie	ef Desc	cription	n				Non-Volatile Memory Storage
		Applies a gain to calibrate ou output voltage	t gair	errors	in mo	dule m	easure				
		Format		Line	ar, two	's com	pleme	ent bi	nary		
		Bit Position	7	6	5	4	3	2	1	0	
D5	VOUT_CAL_GAIN	Access	r	r	r	r	r	r	r	r/w	YES
		Function		E	xpone	nt		M	1antis	sa	
		Default Value	1	1	0	0	0	0	0	V	
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r/w	r/w	r/w	r/w	r/w	r/w	r/w	r/w	
		Function				Mant					
		Default Value	V	V	V	V	V	V	V	V	
		Applies an offs to calibrate ou input voltage (	t offse	et error	s in m	odule r	measu				
		Format		Line	ar, two	's com	pleme	ent bi	nary		
		Bit Position	7	6	5	4	3	2	1	0	
D.C		Access	r	r	r	r	r/w	r	r	r/w	YES
D6	VIN_CAL_OFFSET	Function									
		Default Value	1	1	0	1	V	0	0	V	
		Bit Position	7	6	5	4	3	2	1	0	
		Access	r	r	r/w	r/w	r/w	r/w	r/w	r/w	
		Function		1	1	Mant		1	1	1	
		Default Value	0	0	V	V	V	V	V	V	
		Applies a gain calibrate out g voltage (between	ain er	rors in	modu	le mea					
		Format		Line	ar, two	's com	pleme	ent bi	nary		
		Bit Position	7	6	5	4	3	2	1	0	
D7	VIN_CAL_GAIN	Access	r	r	r	r	r/w	r	r	r/w	YES
	VIN_CAL_GAIN	Function		E	xpone	nt		n	nantis	sa	1 L 3
		Default Value	1	1	0	0	V	0	0	V	
1		Bit Position	7	6	5	4	3	2	1	0	
1		Access	r	r	r	r/w	r/w	r/w	r/w	r/w	
		Function Mantissa									
		Default Value	0	0	0	V	V	V	V	V	

Table 6 (continued)



#### **Thermal Considerations**

Power modules operate in a variety of thermal environments; however, sufficient cooling should always be provided to help ensure reliable operation.

Considerations include ambient temperature, airflow, module power dissipation, and the need for increased reliability. A reduction in the operating temperature of the module will result in an increase in reliability. The thermal data presented here is based on physical measurements taken in a wind tunnel. The test set-up is shown in Figure 47. The preferred airflow direction for the module is in Figure 48.

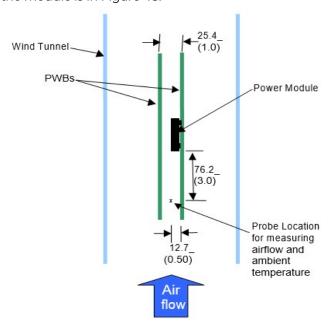


Figure 47. Thermal Test Setup.

The thermal reference points,  $T_{ref}$  used in the specifications are also shown in Figure 48. For reliable operation the temperatures at the Q3 should not exceed 120°C and the temperature at L1 core should not exceed 125°C. The output power of the module should not exceed the rated power of the module ( $V_{o,set} \times I_{o,max}$ ).

Please refer to the Application Note "Thermal Characterization Process For Open-Frame Board-Mounted Power Modules" for a detailed discussion of thermal aspects including maximum device temperatures.

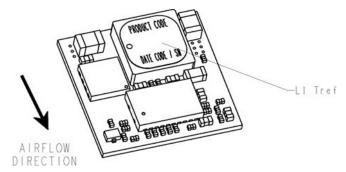


Figure 48. Preferred airflow direction and location of hot-spot of the module (T<sub>ref</sub>).






## **Example Application Circuit**

#### Requirements:

 $V_{in}$ : 12V  $V_{out}$ : 1.8V

I<sub>out</sub>: 9A max., worst case load transient is from 6A to 9A

 $\Delta V_{out}$ : 1.5% of  $V_{out}$  (27mV) for worst case load transient

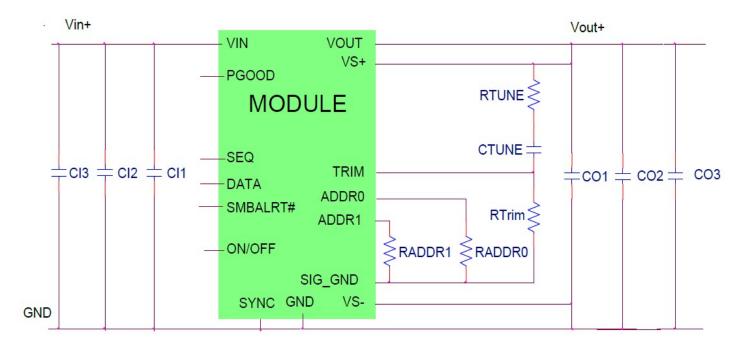

 $V_{in, ripple}$  1.5% of  $V_{in}$  (180mVp-p)

CII Decoupling cap - 1x0.047µF/16V ceramic capacitor (e.g. Murata LLL185R71C473MA01)

CI2 2x22µF/16V ceramic capacitor (e.g. Murata GRM32ER61C226KE20)

CI3 470µF/16V bulk electrolytic

CO1 Decoupling cap -  $1\times0.047\mu$ F/16V ceramic capacitor (e.g. Murata LLL185R71C473MA01) +  $1\times0.047\mu$ F/16V

0402 size ceramic capacitor

CO2 3x47µF/16V ceramic capacitor (e.g. Murata GRM32ER61C226KE20)

CO3 1x330µF/6V POSCAP

C<sub>Tune</sub> 3900pF ceramic capacitor (can be 1206, 0805 or 0603 size)

 $R_{Tune}$  300 $\Omega$  SMT resistor (can be 1206, 0805 or 0603 size)

 $R_{Trim}$  10k $\Omega$  SMT resistor (can be 1206, 0805 or 0603 size, recommended tolerance of 0.1%)

Note: The DATA, CLK and SMBALRT pins do not have any pull-up resistors inside the module. Typically, the SMBus master controller will have the pull-up resistors as well as provide the driving source for these signals.





## **Mechanical Outline**

Dimensions are in millimeters and (inches).

**Tolerances:** x.x mm ±0.5 mm (x.xx in. ± 0.02 in.) [unless otherwise indicated]

 $x.xx mm \pm 0.25 mm (x.xxx in \pm 0.010 in.)$ 

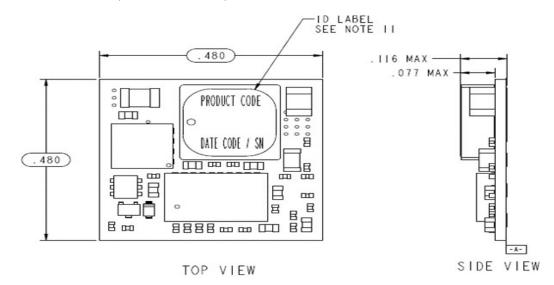

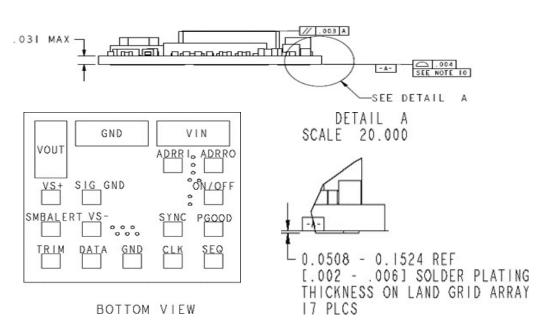

PIN	FUNCTION	PIN	FUNCTION
1	ON/OFF	10	PGOOD
2	V <sub>IN</sub>	11	SYNC <sup>1</sup>
3	GND	12	VS-
4	V <sub>out</sub>	13	SIG_GND
5	VS+ (SENSE)	14	SMBALERT#
6	TRIM	15	DATA
7	GND	16	ADDR0
8	CLK	17	ADDR1
9	SEQ.		






## **Recommended Pad Layout**

Dimensions are in millimeters and (inches).

Tolerances: x.x mm ±0.5 mm (x.xx in. ± 0.02 in.) [unless otherwise indicated]

x.xx mm ± 0.25 mm (x.xxx in ± 0.010 in.)

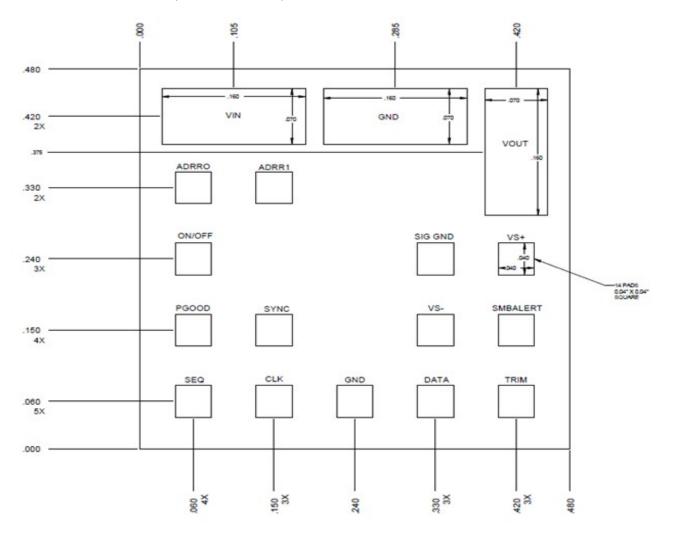

PIN	FUNCTION	PIN	FUNCTION
1	ON/OFF	10	PGOOD
2	V <sub>IN</sub>	11	SYNC <sup>2</sup>
3	GND	12	VS-
4	V <sub>OUT</sub>	13	SIG_GND
5	VS+ (SENSE)	14	SMBALERT#
6	TRIM	15	DATA
7	GND	16	ADDR0
8	CLK	17	ADDR1
9	SEQ		


<sup>&</sup>lt;sup>2</sup>If unused, connect to Ground.




## **Packaging Details**

The 12V Digital Pico SlimLynx™ 12A Open Frame modules are supplied in tape & reel as standard. Modules are shipped in quantities of 500 modules per reel.

All Dimensions are in millimeters and (in inches).

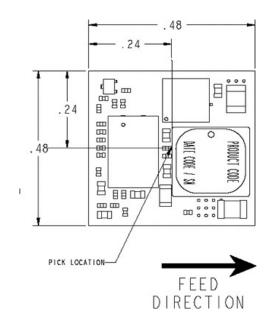

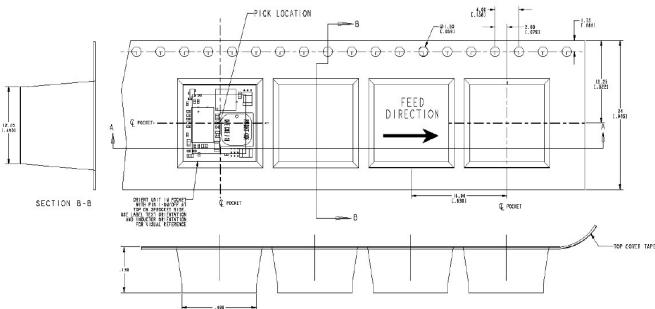

### **Reel Dimensions:**

Outside Dimensions: 254 mm (10.00)
Inside Dimensions: 177.8 mm (7.00")
Tape Width: 24.00 mm (0.945")

© 2024 OmniOn Power Inc. All rights reserved.



#### Surface Mount Information

#### Pick and Place

The 12A Digital Pico SlimLynx<sup>™</sup> Open Frame modules use an open frame construction and are designed for a fully automated assembly process. The modules are fitted with a label designed to provide a large surface area for pick and place operations. The label meets all the requirements for surface mount processing, as well as safety standards, and is able to withstand reflow temperatures of up to 300°C. The label also carries product information such as product code, serial number and the location of manufacture.

#### **Nozzle Recommendations**

The module weight has been kept to a minimum by using open frame construction. Variables such as nozzle size, tip style, vacuum pressure and placement speed should be considered to optimize this process. The minimum recommended inside nozzle diameter for reliable operation is 3mm. The maximum nozzle outer diameter, which will safely fit within the allowable component spacing, is 7 mm.

#### **Lead Free Soldering**

The modules are lead-free (Pb-free) and RoHS compliant and fully compatible in a Pb-free soldering process. Failure to observe the instructions below may result in the failure of or cause damage to the modules and can adversely affect long-term reliability.

#### Pb-free Reflow Profile

Power Systems will comply with J-STD-020 Rev. D (Moisture/Reflow Sensitivity Classification for Nonhermetic Solid State Surface Mount Devices) for both Pb-free solder profiles and MSL classification procedures. This standard provides a recommended forced-air-convection reflow profile based on the volume and thickness of the package (table 4-2). The suggested Pb-free solder paste is Sn/Ag/Cu (SAC). The recommended linear reflow profile using Sn/Ag/Cu solder is shown in Fig. 49. Soldering outside of the recommended profile requires testing to verify results and performance.

#### **MSL Rating**

The 12A Digital Pico SlimLynx<sup>TM</sup> Open Frame modules have a MSL rating of 2a

#### Storage and Handling

The recommended storage environment and handling procedures for moisture-sensitive surface mount packages is detailed in J-STD-033 Rev. A (Handling, Packing, Shipping and Use of Moisture/ Reflow Sensitive Surface Mount Devices). Moisture barrier bags (MBB) with desiccant are required for MSL ratings of 2 or greater. These sealed packages should not be broken until time of use. Once the original package is broken, the floor life of the product at conditions of  $\leq$  30°C and 60% relative humidity varies according to the MSL rating (see J-STD-033A). The shelf life for dry packed SMT packages will be a minimum of 12 months from the bag seal date, when stored at the following conditions: < 40°C, < 90% relative humidity.

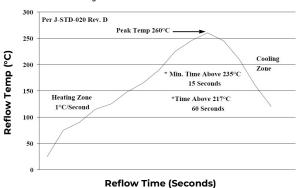


Figure 49. Recommended linear reflow profile using Sn/Ag/Cu solder

#### Post Solder Cleaning and Drying Considerations


Post solder cleaning is usually the final circuit-board assembly process prior to electrical board testing. The result of inadequate cleaning and drying can affect both the reliability of a power module and the testability of the finished circuit-board assembly. For guidance on appropriate soldering, cleaning and drying procedures, refer to Board Mounted Power Modules: Soldering and Cleaning Application Note (ANO4-001).




## **Packaging Details**

The 12V Digital Pico SlimLynx™ 12A Open Frame modules are supplied in tape & reel as standard. Modules are shipped in quantities of 500 modules per reel.

All Dimensions are in millimeters and (in inches).

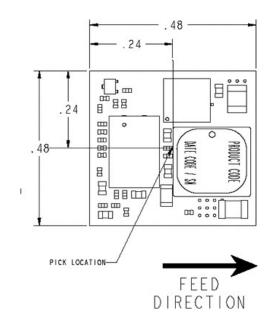

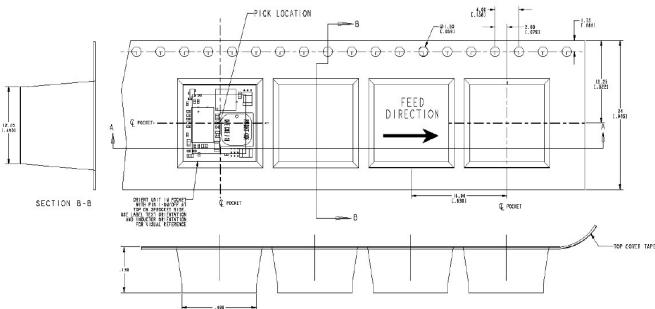

### **Reel Dimensions:**

Outside Dimensions: 254 mm (10.00)
Inside Dimensions: 177.8 mm (7.00")
Tape Width: 24.00 mm (0.945")



## **Ordering Information**

Please contact your OmniOn Sales Representative for pricing, availability and optional features.

Device Code	Input Voltage Range	Output Voltage	Output Current	On/Off Logic	Sequencing	Ordering Code
PNDT012A0X3-SRZ	3 – 14.4V <sub>dc</sub>	0.45 – 5.5 V <sub>dc</sub>	12A	Negative	Yes	150038560

**Table 9. Device Codes** 

<sup>-</sup>Z refers to RoHS compliant parts

Package Identifier	Family	Sequencing Option	Output current	Output voltage	On/Off logic	Remote Sense	Options	RoHS Compliance
Р	ND	Т	012A0	X		3	-SR	Z
P=Pico U=Micro M=Mega G=Giga	ND=SlimLyn x Digital Open Frame NV=SlimLyn x Digital Open Frame	T=with EZ Sequence X = without sequencing	12A	X = programmab le output	No entry = negative	3 = Remote Sense	S = Surface Mount R = Tape & Reel	Z = RoHS6

Table 10 . Coding Scheme

OmniOn Power Inc.'s digital non-isolated DC-DC products may be covered by one or more of the following patents licensed from Bel Power Solutions, Inc.: US20040246754, US2004090219A1, US2004093533A1, US2004123164A1, US2004123167A1, US2004178780A1, US2004179382A1, US20050200344, US20050223252, US2005289373A1, US20060061214, US2006015616A1, US20060174145, US20070226526, US20070234095, US20070240000, US20080052551, US20080072080, US20080186006, US6741099, US6788036, US6936999, US6949916, US7000125, US7049798, US7068021, US7080265, US7249267, US7266709, US7315156, US7372682, US7373527, US7394445, US7456617, US7459892, US7493504, US7526660.

Outside the US Bel Power Solutions, Inc. licensed technology is protected by patents: AU3287379AA, AU3287437AA, AU3290643AA, AU3291357AA, CN10371856C, CN1045261OC, CN10458656C, CN10459360C, CN10465848C, CN11069332A, CN11124619A, CN11346682A, CN1685299A, CN1685459A, CN1685582A, CN1685583A, CN1698023A, CN1802619A, EP1561156A1, EP1561268A2, EP1576710A1, EP1576711A1, EP1604254A4, EP1604264A4, EP1714369A2, EP1745536A4, EP1769382A4, EP1899789A2, EP1984801A2, W004044718A1, W004045042A3, W004045042C1, W004062061 A1, W004062062A1, W004070780A3, W004084390A3, W004084391A3, W005079227A3, W005081771A3, W006019569A3, W02007001584A3, W02007094935A3

#### **Contact Us**

For more information, call us at

- +1-877-546-3243 (US)
- +1-972-244-9288 (Int'l)

## **Errata**




## **Known Exception to Functional Specifications**

Output-voltage low frequency oscillation has been observed at following load conditions where Phase Margin dips below 45°, with no practical fix available.

Vout (V)	lout (<45° PM)
0.7	1A
0.9	2A
1.1	2-3A
1.3	2-3A
1.5	3A
1.7	3A
1.9	3A

### Example:

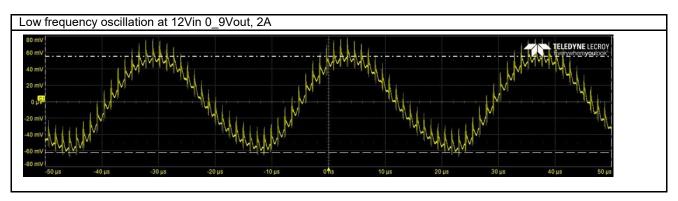

This limitation causes no problem in most applications, but customers are cautioned to check for this behavior if expecting prolonged operation at light load for output voltages between 0.7V and 1.9V



## **Change History (excludes grammar & clarifications)**

Revision	Date	Description of the change
8.3	12/13/2021	Updated as per template
8.4	12/05/2023	Updated as per OmniOn template
8.5	10/3/2024	Added ERRATA (p.43); Updated weight (p.4)



### **OmniOn Power Inc.**

601 Shiloh Rd. Plano, TX USA

### omnionpower.com

We reserve the right to make technical changes or modify the contents of this document without prior notice. OmniOn Power does not accept any responsibility for errors or lack of information in this document and makes no warranty with respect to and assumes no liability as a result of any use of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of OmniOn Power. This document does not convey license to any patent or any intellectual property right. Copyright© 2023 OmniOn Power Inc. All rights reserved.