



GPS Synchronization (GypSync) Module

User Manual

Copyright © 2014 Pletronics Inc.

Rev: 1.0

Date: October 24, 2014

1 Introduction

1.1 Overview

The GypSync evaluation kit includes a GypSync GPS module with an evaluation board. The evaluation board is intended for use in evaluating the module. It allows for easy connection to the appropriate inputs and outputs. Section 2 of the guide identifies the various connections.

1.2 General Precautions

The module is designed for 3.3 volt operation. If 5.0 volt is required, please contact factory for this option. Do not exceed the maximum Vcc voltage as this could damage the unit. Proper grounding and ESD precautions should be maintained when handling this and all electronic components.


1.4 GypSync Module Series Pin-out

The GypSync module pin-out is in table 1-1. This defines the pin-out of the module. The pin-out for the test board is defined in section 2. The pads on the module and connections on the test board are not aligned.

Pad	Function
1	Ground
2	10 MHz Out
3	Lock OK
4	1 PPS Output
5	1 PPS Input
6	+ 5V Output
7	Ground
8	+3.3V VDO In
9	Ground
10	Antenna Input
11	Ground
12	NMEA Transmit
13	1PPS Enable
14	N/C
15	N/C

2 Evaluation Board Instructions

2.0 Evaluation Board Connections

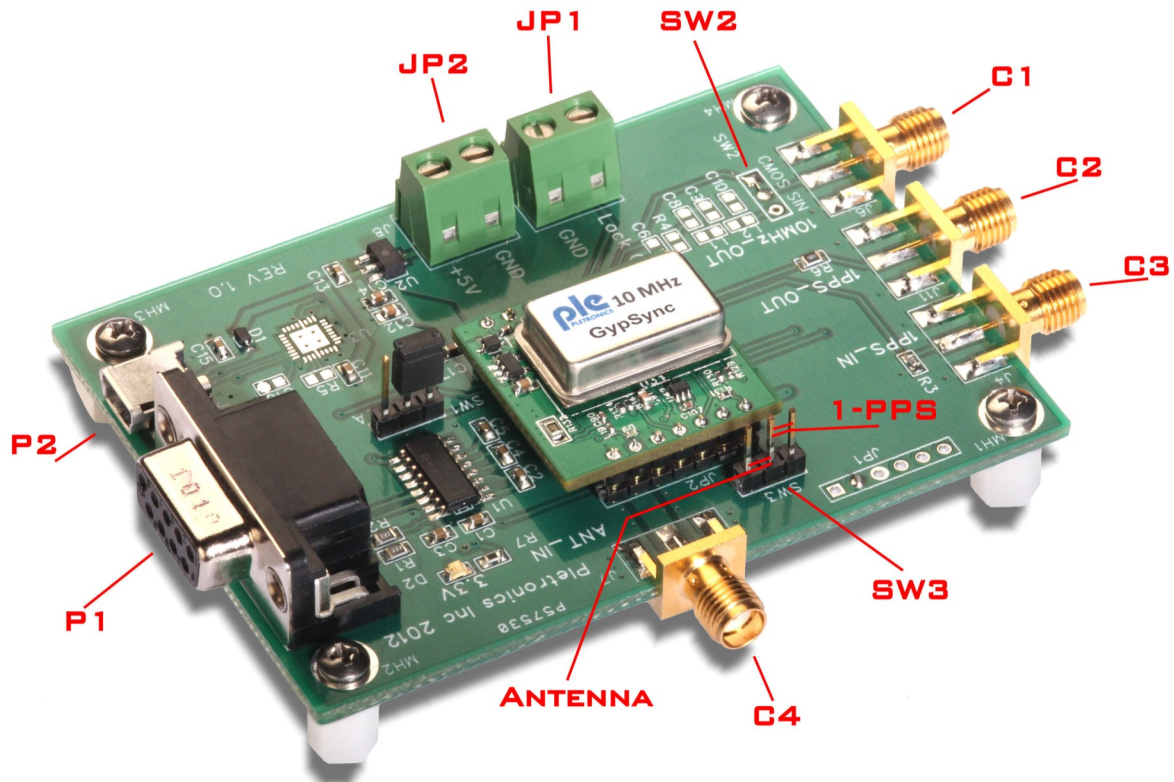

Connection C1

Connection C1 is the frequency output of the device. It will reflect the frequency the device was ordered at. This would be 10.0 MHz, 16.384 MHz, or 20.0 MHz. The output will be either CMOS or sine wave depending on the setting of SW2. The sine wave output is recommended due to the effects of the 50 ohm SMA connector on CMOS square waves.

Connection C2

Connection C2 will be the 1 pulse per second output. This will be 1pps regardless of the module frequency and will be a standard CMOS output.

Connection C3

Connection C3 is for a 1 pulse per second input. This is used in conjunction with SW3 to lock to an external 1pps signal instead of the antenna.

Connection C4

Connection C4 is for the GPS antenna input. An antenna is supplied with the evaluation kit. The GypSync module provides 5.0 VDC supply to the antenna with up to 30 mA of current.

Switch SW2

This jumper can be set to select the frequency output as CMOS or sine wave. Sine wave is recommended due to the effects of the SMA connector on CMOS square waves.

Switch SW3

This jumper sets the option for locking to an external 1pps signal or using the antenna signal for locking. The graphic in section 2 of the evaluation board instructions shows the appropriate setting for the options.

Connection JP1

This connection provides a logic output showing the lock status of the device. A high logic indicates a locked condition, a low status indicates an unlocked condition.

Connection JP2

Connection JP2 is one possible option for powering the test board and module. This will require a 5.0 VDC supply and ground. The board is marked appropriately to for the +5V and GND connection. An alternative option is to use P2, the USB port. The USB port is used strictly as a power supply to the unit. ONLY ONE of these options should be used to power the device. Applying power from both could damage the device.

Connection P1

Connection P1 is used to read back scrolling information. A memory stick is included in the package with the software to read back the positioning data. The Software can also be downloaded from u-blocs at <http://www.u-blox.com/en/evaluation-tools-a-software/u-center/u-center.htm>. To receive NMEA messages, open u-center software. Connect appropriate Com port (Menu Receiver/Port) and set baud rate to 38,400 (Menu Receiver/Baud rate)

Note: Output frequency stability is degraded by GPS AMY-6 module 1PPS signal drift and jitter. To eliminate the jitter, the GypSync module provides quantization error compensation. To avoid degradation due to multipath effects choose an outdoor antenna that primarily receives satellites with high elevation angles. Additional environmental isolation helps to improve short term stability.

IMPORTANT NOTICE

Pletronics Incorporated (PLE) reserves the right to make corrections, improvements, modifications and other changes to this product at anytime. PLE reserves the right to discontinue any product or service without notice. Customers are responsible for obtaining the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to PLE's terms and conditions of sale supplied at the time of order acknowledgment.

PLE warrants performance of this product to the specifications applicable at the time of sale in accordance with PLE's limited warranty. Testing and other quality control techniques are used to the extent PLE deems necessary to support this warranty. Except where mandated by specific contractual documents, testing of all parameters of each product is not necessarily performed.

PLE assumes no liability for application assistance or customer product design. Customers are responsible for their products and applications using PLE components. To minimize the risks associated with the customer products and applications, customers should provide adequate design and operating safeguards.

PLE products are not designed, intended, authorized or warranted to be suitable for use in life support applications, devices or systems or other critical applications that may involve potential risks of death, personal injury or severe property or environmental damage. Inclusion of PLE products in such applications is understood to be fully at the risk of the customer. Use of PLE products in such applications requires the written approval of an appropriate PLE officer. Questions concerning potential risk applications should be directed to PLE.

PLE does not warrant or represent that any license, either express or implied, is granted under any PLE patent right, copyright, artwork or other intellectual property right relating to any combination, machine or process which PLE product or services are used. Information published by PLE regarding third-party products or services does not constitute a license from PLE to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from PLE under the patents or other intellectual property of PLE.

Reproduction of information in PLE data sheets or web site is permissible only if the reproduction is without alteration and is accompanied by associated warranties, conditions, limitations and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. PLE is not responsible or liable for such altered documents.

Resale of PLE products or services with statements different from or beyond the parameters stated by PLE for that product or service voids all express and implied warranties for the associated PLE product or service and is an unfair or deceptive business practice. PLE is not responsible for any such statements.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Pletronics:](#)

[GT11001-10.0M-EVAL](#)